GCF/GCH Series Flexible Disc Couplings

Installation Instructions

P-5029-TBW Form 607









ASSEMBLY & ALIGNMENT

- Clean and inspect hub bore(s) and shaft ends. Remove any nicks or burrs with a stone. For tapered shafts, check contact with machinists' bluing. For straight shafts, measure shaft and bore diameters to confirm proper fit.
- 2. Fit key(s) to hub and shaft if applicable. Installed keys must fit snugly on the sides and have a small clearance over the top.
- 3. Arrange an axial stop bar or collar to stop the hub at the desired position.
- 4. Heat hub uniformly to required temperature to allow installation on shaft. Use of open flame is not recommended, to avoid localized overheating and damage to hubs. If a torch must be used, use a large rosebud tip and be



FIG.2: EXCESSIVE AXIAL MISALIGNMENT AT INSTALLATION careful to maintain even heat distribution. See graph on page 4.

CAUTION: Do not exceed 550° F., to avoid damage to hub.

- 5. Quickly slide the expanded hub into position against the prearranged axial stop, and allow to cool.
- 6. (GCF only) Install disc bolts in flywheel adapter with heads in milled slots, and bolt adapter to flywheel. Torque interface bolts to value specified in Table 3, or as otherwise directed by the equipment supplier.
- Move the equipment into place. Distance 'D' between shaft ends and/or flange face should match the target dimension within +/-25% of the coupling's axial capacity. Generally speaking the axial error at installation should not be visible to the naked eye- see Figure 2. See Table 1 or the assembly drawing for dimensions.
- 8. Alignment can be performed using laser equipment if available, or with dial indicators as described following. Attach a dial indicator's base to one hub or the flywheel adapter, and indicate a point on the other hub flange's outside diameter. See Figure 3.

	LEGACY	'A' DIA.	SPACER 'D' DIMENSION (INCHES)			COUPLING AXIAL	INSTALLATION MISALIGNMENT
SIZE	SIZE	(INCHES)	SPACER	GCF	GCH	CAPACITY (INCHES)	LIMIT (INCHES T.I.R.)
340	40	8.38	31	5.31	4.14	±.06	.007
			35	5.88	4.71		
	412 120	0 11.00	42	7.14	5.57	±.08	.009
412 120			45	7.64	6.07		
			50	8.76	7.19		
424	240 / 300	15.00	55	9.89	7.45	±.10	.013
			60	10.89	8.45		
456	560 / 640	560 / 640 18.00	70	12.44	9.63	±.12	.016
			75	13.51	10.70		
511	1100 / 1200	0 / 1200 22.00	80	14.76	11.39	±.14	.019
			85	15.76	12.39		
			92	17.26	13.89		

TABLE 1: DIMENSIONS & CAPACITIES

- 9. Rotate only the rotor on which the indicator's base is mounted and read rim runout. T.I. R. readings should not exceed the values shown in Table 1.
- Reposition the indicator tip to indicate a point on the opposing hub's flange face near the OD, and repeat step #9 to read face runout. T. I. R. readings should not exceed the values in Table 1. Align equipment as needed to ensure that rim and face readings are both within the alignment limit.
- 11. Install a disc pack on adapter or first hub. Review figure 1 to confirm proper bolt orientation. For couplings with two hubs, install the four disc bolts which connect the pack to the first hub. Coat all bolt threads and nut faces with anti-seize thread compound.



FIG.3: DIAL INDICATOR MOUNTING FOR RIM & FACE READINGS

- 12. Bring spacer into position and install the other four bolts and nuts at the first end, oriented as shown in Figure 1. Continue to support spacer to prevent damage to the disc pack.
- 13. Install second disc pack and all remaining bolts and nuts as shown in Figure 1. Read the following sections before tightening bolts.

A WORD ABOUT BOLT TIGHTENING

Proper bolt tightening is crucial to obtain the preloads needed for proper coupling performance.

- a) Lubricate threads and nut faces with antiseize thread compound before assembly.
- b) In general, rotating the nut while holding the bolt is preferred, but in some cases, the reverse may be necessary.
- c) Methods of obtaining proper bolt preloadlisted in order of accuracy:
 - 1) Measure actual bolt stretch
 - 2) Uses Supernuts (see page 4)
 - 3) Torque wrench
 - 4) Turn of the Nut

TB Wood's • 888-829-6637

TABLE 2: DISC BOLT TIGHTENING DATA

COUPLING SIZE	LEGACY COUPLING SIZE	DISC BOLT THREAD SIZE	SOCKET WRENCH SIZE (INCHES)	BOLT STRETCH (INCHES)	NUT TORQUE (FT - LB)	TURN OF THE NUT (DEGREES)
340	40	1/2-20	7/8	.004	75	33
412	120	3/4-16	1 1/4	.006	250	37
424	240 / 300	1-14	1 5/8	.006	450	45
456	560 / 640	1 1/4-12	2	.009	830	51
511	1100 / 1200	1 1/2-12	2 3/8	.012	1400	61

- 14. When clearance permits, best preload accuracy is obtained by measuring bolt stretch directly with a micrometer. Table 2 lists the target stretch in inches. If this is not practical, obtain a suitable torque wrench and "crow's foot" attachment to facilitate bolt torqueing. See Table 2 for required wrench sizes.
- 15. If a torque wrench, micrometer, or a Supernut cannot be used, use the "turn-of-the-nut" values from Table 2, measured in degrees from the point where the nut is seated against its mating flange with .1 (one-tenth) of its target tightening torque (for example 110 ft-lb on GCF456).
- 16. Tighten all bolts to the specified tightening torques.

TABLE 3: FLYWHEEL BOLT TIGHTENING DATA

BOLT SIZE & THREAD	THREAD COEFFICIENT 'C'	SOCKET WRENCH SIZE (INCHES)	BOLT TIGHTENING TORQUE (FT - LB)
3/8-16	.18	9/16	36
1/2-13	.16	3/4	80
5/8-11	.15	15/16	147
3/4-10	.14	1 1/8	246
7/8-9	.13	1 5/16	377
1-8	.13	1 1/2	541

DATA SUPPLIED FOR REFERENCE ONLY! Engine manufacturer or packager is responsible for specifying and/or supplying fasteners and locking method. These values apply for coarse thread cadmium plated Grade 8 bolts lubricated with oil and tightened to 70% of yield strength

SUPERNUT TIGHTENING TORQUES

Supernuts are an available option which greatly eases the task of obtaining proper preload in large fasteners. They must be installed with the included hardened washer, and the jackbolts MUST be properly lubricated on their threads and tips using their special grease. Values shown apply when using standard Superbolt ® "JL-G" grease.

DISC BOLT	"CY" SERIES SUPERNUT JACKBOLTS					
THREAD SIZE	THREAD SIZE	WRENCH SIZE INCHES	TIGHTENING TORQUE FT-LB			
1-14	5/16	1 / 4	34			
1 1/4-12	5/10	1/4	63			
1 1/2-12	0./0	E/16	83			
1 3/4-12	3/8	5/16	84			

SUPERBOLT is a registered trademark of Superbolt Inc., Carnegie, PA USA

HUB SHRINK FIT TEMPERATURES

DATA SUPPLIED FOR REFERENCE ONLY! Installer must ensure that proper procedures and values are used.

Graph assumes steel hub material and 70° F. ambient temperature, and includes a 10% safety margin. For example, for 6" bore and .008" interference, heating the hub from 70° to 300° will expand the hub by .0088".

Do not exceed the interference specified on the assembly drawing to avoid overstressing the hub.



TB Wood's Facilities

North America

USA

440 North Fifth Avenue Chambersburg, PA 17201 - USA 888-829-6637 • 717-264-7161 Belted Drives and Elastomeric Couplings

Customer Service 1-888-829-6637

Application Support 1-888-829-6637

2000 Clovis Barker Road San Marcos, TX 78666 - USA 1-888-449-9439 *General Purpose Disc Couplings*

Customer Service 1-888-449-9439

4970 Joule St Reno, NV 89502 - USA 775-857-1800

Canada

9779 45 Ave NW Edmonton, AB T6E 5V8 - Canada +1 780-439-7979

6305 Danville Road Mississauga, ON L5T 2H7 - Canada 1-800-829-6631

1073 Rue Bégin Saint-Laurent, QC H4R 1V8 - Canada +1 514-332-4812

Mexico

Comisión Federal de Electricidad 850, Industrial San Luis, San Luis, S.L.P., 78395 - Mexico +52 444 137 1500

Europe

Merchant Drive, Hertford Hertfordshire SG13 7BL - England +44(0)1992 501900 *Elastomeric Couplings*

The Brands of Altra Motion

Couplings

Ameridrives www.ameridrives.com

Bibby Turboflex www.bibbyturboflex.com

Guardian Couplings www.guardiancouplings.com

Huco www.huco.com

Lamiflex Couplings www.lamiflexcouplings.com

Stromag www.stromag.com TB Wood's

www.tbwoods.com

Linear Systems

Thomson www.thomsonlinear.com Geared Cam Limit Switches Stromag www.stromag.com

Engineered Bearing Assemblies Kilian www.kilianbearings.com

Electric Clutches & Brakes

Matrix www.matrix-international.com Stromag

www.stromag.com Warner Electric www.warnerelectric.com

Belted Drives TB Wood's www.tbwoods.com

Heavy Duty Clutches & Brakes

Twiflex www.twiflex.com

Stromag www.stromag.com Svendborg Brakes www.svendborg-brakes.com

Wichita Clutch www.wichitaclutch.com

Gearing & Specialty Components

Bauer Gear Motor www.bauergears.com

Boston Gear www.bostongear.com

Delevan www.delevan.com

Delroyd Worm Gear www.delroyd.com

Nuttall Gear www.nuttallgear.com

Engine Braking Systems

Jacobs Vehicle Systems www.jacobsvehiclesystems.com

Precision Motors & Automation Kollmorgen

www.kollmorgen.com

Miniature Motors

Portescap www.portescap.com

Overrunning Clutches

Formsprag Clutch www.formsprag.com

Marland Clutch www.marland.com

Stieber www.stieberclutch.com

Neither the accuracy nor completeness of the information contained in this publication is guaranteed by the company and may be subject to change in its sole discretion. The operating and performance characteristics of these products may vary depending on the application, installation, operating conditions and environmental factors. The company's terms and conditions of sale can be viewed at http://www.altramotion.com/terms-and-conditions/sales-terms-and-conditions. These terms and conditions apply to any person who may buy, acquire or use a product referred to herein, including any person who buys from a licensed distributor of these branded products.

©2021 by TB Wood's LLC. All rights reserved. All trademarks in this publication are the sole and exclusive property of TB Wood's LLC or one of its affiliated companies.



www.tbwoods.com

2000 Clovis Barker Road San Marcos, TX 78666 512-353-4000