



SAFETY MESSAGE DEFINITIONS

⚠ DANGER Indicates a hazard which, if not avoided, will result in serious injury or death.

⚠ WARNING Indicates a hazard which, if not avoided, could result in serious injury or death.

⚠ CAUTION Indicates a hazard which, if not avoided, could result in minor or moderate personal injury.

NOTICE Indicates information considered important, but not hazard-related (e.g. messages relating to property damage).

GENERAL SAFETY INSTRUCTIONS

⚠ WARNING

- Read and follow all instructions carefully.
- Disconnect and lock out power before installation and maintenance. Working on or near energized equipment can result in severe injury.
- Do not operate equipment without guards in place. Exposed equipment can result in severe injury or death.
- Read and understand the information in this section and in this manual completely before installing, operating or maintaining this equipment. Failure to follow this instruction could result in severe injury or death.

⚠ CAUTION

- Perform periodic inspections. Equipment may fail prematurely and could become unsafe if not properly inspected and maintained. Failure to follow this instruction could result in mild or moderate personal injury.

Contents

Introduction	2
Specifications	2
Mounting	3
Electrical Connections	4
Internal Adjustments	6
System Troubleshooting.....	7
Warranty	8

WARNING! Failure to follow these instructions may result in product damage, equipment damage, and serious or fatal injury to personnel.

INTRODUCTION

Warner Electric's CBC-300 and CBC-300-1 are constant current, solid state electronic power supplies designed to operate any of the Warner Electric 90 Volt clutches and brakes, including fail safe designs. They can operate a single clutch or brake, two clutches, two brakes, a combination clutch and brake, or a combination clutch and fail safe brake, depending on the switching arrangement used and the application requirements.

The CBC-300 series controls operate from 120 VAC single-phase input power. They provide constant current output as set by the torque adjustment potentiometers on the front panel or remote potentiometer. On the CBC-300 series both outputs are adjustable. Output current ranges are selectable for the adjustable output channels in one of five ranges by the DIP switches located on the control's printed circuit board.

Two versions of the CBC-300 are provided to handle a wide range of applications. The standard version has two integrated control torque adjust potentiometers. The CBC-300-1 version is available where an external limit adjustment potentiometers are required.

Operations of both units are identical except for the method of the control potentiometer mounting. The CBC-300-1, external potentiometer option, has terminal blocks mounted on the PC boards for connection of the potentiometers.

The potentiometers used can be supplied either as optional accessory items or be obtained from a local electronic supply house.

An internal 1.5A FA fuse is provided for line to ground shorts.

Two LED indicators are provided on the front panel of the control for "POWER" and "SHORT" indications. The green indicator marked "POWER" is illuminated whenever the AC input power is applied to the control. A red indicator marked "SHORT" is illuminated whenever a short circuit condition occurs in either of the outputs. To reset, power must be removed, the shorted condition cleared, and the AC input power reapplied to the control.

The enclosed version may be used with or without the cover. Removal of the plastic cover when the control is used in an enclosure will increase the operating temperature range of the control.

SPECIFICATIONS

Input Power: 120 VAC, +10%, -15%, 50/60 Hz, single phase, 215 VA maximum.

Output: Pulse-width modulated full wave rectified DC. Constant current, switch selectable ranges designed for 90 volt DC clutches and brakes.

Ambient Temperature: -32° F to + 113° F (0° C to + 45° C) with plastic cover installed. -32° F to +150° F (0° C to + 66° C) with plastic cover removed, or board assembly only.

Circuit Protection: Internal short circuit protection on outputs. An internal fuse is provided for AC ground faults. It is rated at 1.5A FA replaceable (5 mm X 20 mm).

Control Adjust: CBC-300 via front panel potentiometers for current adjustment. CBC-300-1 via external mounted potentiometers for current adjustment.

Status Indicators: "POWER" – green LED indicating AC power is applied to the control.

"SHORT" – red LED indicating that a short circuit condition exists on one or both of the outputs.

Internal Adjustments: Current Range Selection via DIP switches, SW1 for Channel 1 and SW2 for Channel 2.

Current Ranges:

Switch Setting	1	2	3	4	5
Max Output, ma	60	175	245	305	533

External Switching: Mechanical or Electro-mechanical Switching: Customer supplied, 1 amp, 125 V minimum rating.

Solid-state NPN isolated transistor Customer supplied, 2 amp, 250V minimum rating. Maximum off state leakage current < 1 ma.

External Pots:

Remote current adjust pot
Customer supplied: 10,000 ohm, 2 watt, linear,
maximum distance from control to potentiometer
not to exceed 10 feet.

Optional Accessory Pot Kit;
part number, 6011-101-002

Wiring Entrance: Two 7/8" diameter entrance holes
located on the bottom of the control chassis on
enclosed units. No conduit entrances are on chassis
mount versions.

Enclosure: Rated NEMA 1 only – Control must be kept
clear of foreign materials, dust, grease and oil which
might affect its operation.

Part Numbers:

Enclosed Versions	
CBC-300	6021-448-001
CBC-300-1	6021-448-002

MOUNTING

Enclosed Units

Any vertical, horizontal, or angled surface is suitable for
mounting the CBC-300 and CBC-300-1.

Follow these procedures to mount your control:

1. Remove the front cover by removing the top and
bottom retaining screws.
2. Set the control on the mounting surface and mark
for the three mountings holes in accordance with
"Dimensions." (See Figure 1.)
3. Install the top two mounting bolts or screws until
they are nearly flush, set the control over the larger
top mounting holes and pull down to position
the control.
4. Tighten the top bolts or screws and install the
bottom bolt or screw and tighten.

This completes the mounting of the control. The control
is now ready for final wiring. Refer to the wiring section for
final wiring.

1. If the CBC-300-1 control is used, first pre-wire
the external potentiometers. Refer to: External
Potentiometer wiring for CBC-300-1, page 5.
2. If the CBC-300 control is used, refer to: Final Wiring,
page 6.

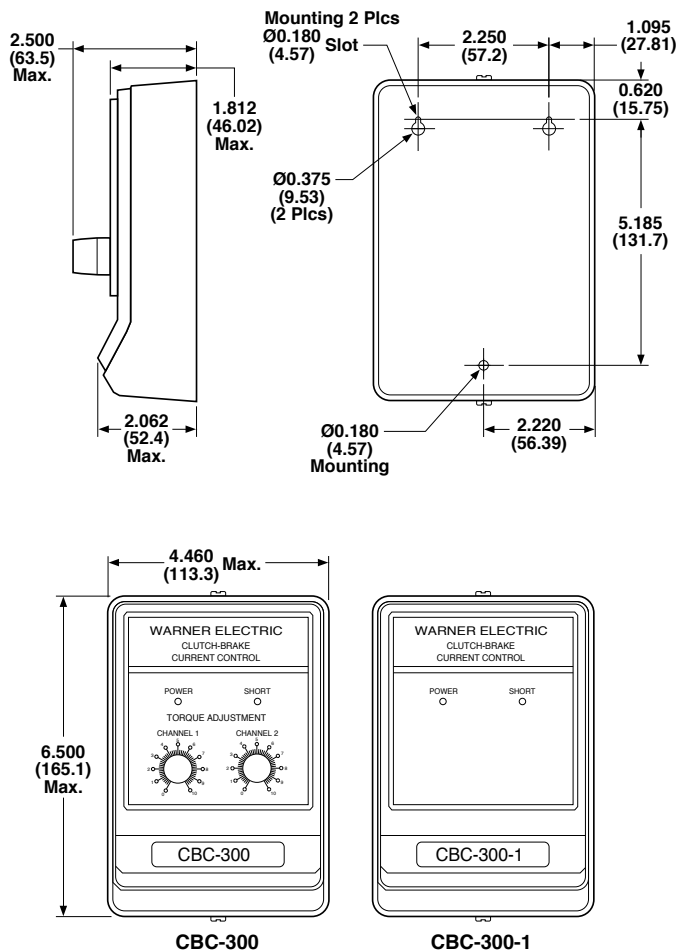


Figure 1

External Potentiometer wiring for CBC-300-1

1. Remove the four screw that hold the bracket
assembly and PC Board to the chassis.
2. Route the potentiometer cable(s) through one of the
conduit entrance holes on the bottom of the unit
and wire to the appropriate terminal block on the PC
board. Refer to the wiring diagrams below for the
proper connections.

CBC-300-1 External Current Limit Adjustment

1. Wire the external current limit potentiometer to
Terminal Block TB-3 for Channel 1 and TB-4 for
Channel 2 as shown in the diagram. (See Figures 2
& 3).
2. If the accessory potentiometer kit is used, wire
the potentiometers per the colors as shown in the
diagram.
3. Make sure all terminals are securely fastened and
the wiring cable is secured so that it can't pull loose
from the terminals.

This completes the preliminary wiring of the remote potentiometers. The control is now ready for final wiring. Refer to the wiring section for final wiring, page 5.

Note: Be careful not to pinch or crimp the pot wiring to prevent shorting to the housing or components.

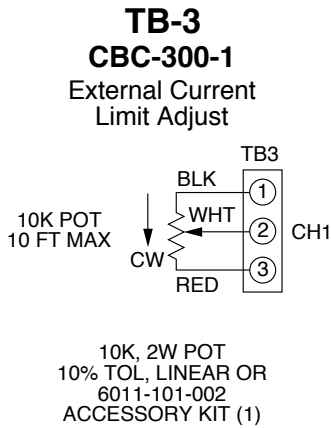


Figure 2

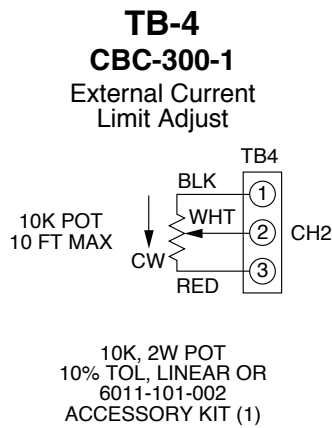


Figure 3

ELECTRICAL CONNECTIONS

WARNING! All electrical current must be off when making electrical connections to prevent injury or death which can result from contact with live wires.

AC Input Power Connections

1. Connect Earth Ground wire to Terminal 1 and tighten securely.
2. Connect the Hot side of the 120 VAC line to Terminal 2 and tighten securely.
3. Connect the neutral side of the 120 VAC line to Terminal 3 and tighten securely.
4. Determine which clutch/brake arrangement is to be used and proceed to the appropriate wiring section. (Normal wiring or Electrically Released Wiring, page 5).

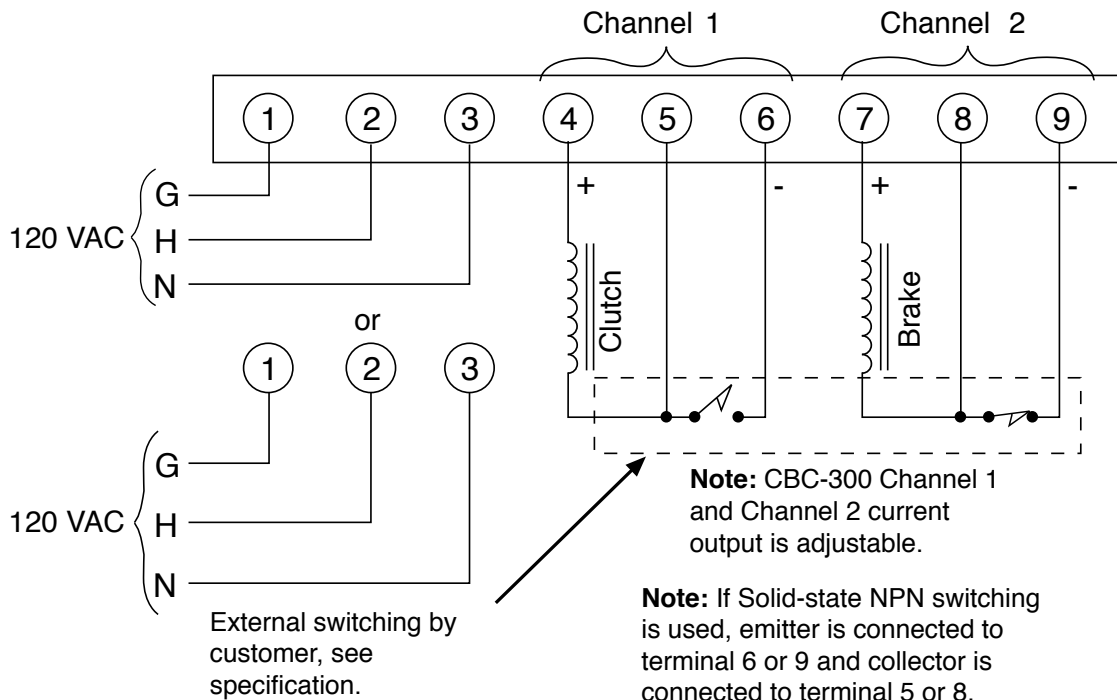


Figure 4

Normal Clutch–Brake Wiring (Power applied clutch or brakes)

1. Connect either the clutch or brake magnet to Terminals 4 and 5. Tighten Terminal 4 securely (See Figure 4).
2. Connect the other magnet, either brake or clutch to Terminals 7 and 8. Tighten Terminal 7 securely.
3. Connect switching for Channel 1 to Terminals 5 and 6. Tighten both terminals securely.
4. Connect switching for Channel 2 to Terminals 8 and 9. Tighten both terminals securely.
5. Set DIP Switch, SW1 for proper current setting before applying power to the control.
See Internal Switch Settings Chart for proper DIP Switch settings.
6. If external potentiometers are being used, then proceed to the external potentiometer wiring section. If external potentiometers are not used, this completes the wiring of the control.
7. Double check all connections before applying power.

Clutch – Electrically Released Brake Wiring (Power on clutch / power off Brake)

1. Connect the Brake to Terminals 4 and 5. Observe the polarity when making connections. Tighten Terminal 4 securely (See Figure 5).
2. Connect the Clutch to Terminals 7 and 8. Tighten Terminal 7 securely.
3. Connect the switching for Channel 1 to Terminals 5 and 6. Tighten terminals securely.
4. Connect the switching for Channel 2 to Terminals 8 and 9. Tighten terminals securely.
5. Set DIP Switch, SW1 for proper current setting before applying power to the control. See Internal Switch Settings Chart for proper DIP Switch settings.
6. If external potentiometers are being used, then proceed to the external potentiometer wiring section. If they are not used, this completes the wiring of the control.
7. Double check all connections before applying power.

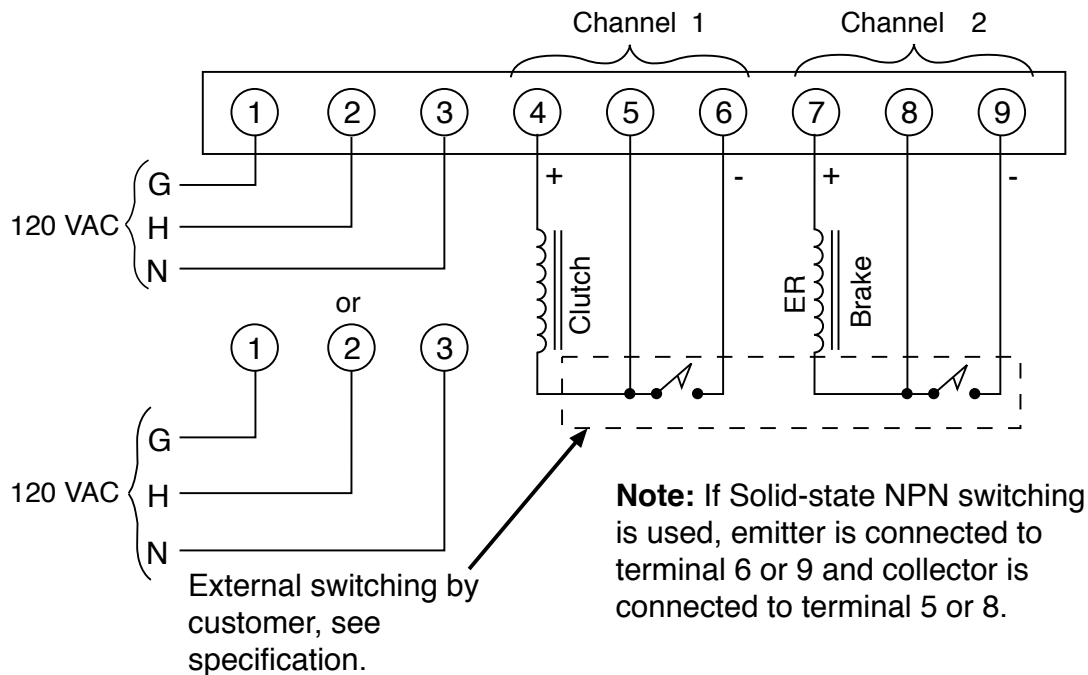


Figure 5

INTERNAL ADJUSTMENTS

The internal DIP Switch on the control circuit board adjusts the control for the proper current range to the clutch and/or brake coil being used. The Chart below indicates the proper setting based on coil resistance and Warner Electric™ product. To adjust for products not listed, obtain coil resistance information and set switches per coil resistance.

Note: Only one switch number is to be set to the “on” position at any time.

Switch DIP No.	1	2	3	4	5
Coil Resistance at 20° C (W)	1000-1550	350-999	250-349	205-249	100-204
Current Range	0 - 60 ma	0 - 175 ma	0 - 245 ma	0 - 305 ma	0 - 533 ma
Warner Electric Clutch Models	SF-120 SF-170 SF-250 SF-400	EC-375 EC-475 EM-50 EM-100 EM-180 UM-50 UM-100 UM-180 UM-50C UM-180C EUM-50 EUM-100 EUM-180	ATC-25 PC-500 SF-825 PC-1000 SF-1225 PC-1225 PC-1525 EC-1000 EM-210 UM-210 UM-215 UM-210C EUM-210 EUM-215	SF-500 SF-650 SF-825BM PC-825 SF-1000 EC-650 EC-825 EC-1225 ATC-55	ATC-115 SF-1525 (Not SF-1525HT Models)
Warner Electric Brake Models	PB-120 PB-170 PB-250 PB-400	EB-375 EB-475 EM-50 EM-100 EM-180 UM-50 UM-100 UM-180 UM-50C UM-180C EUM-50 EUM-100 EUM-180	ATB-25 PB-500 PB-650 PB-1000 PB-1225 PB-1525 EB-650 EB-1000 EB-1225 EMFB-50 UMFB-50 ER/FB-375 EM-210 UM-210 UM-215 UM-210C EUM-210 EUM-215	EB-825 EMFB-180 UMFB-180 ER/FB-475 ATB-55 ER-825	EMFB-210 UMFB-210 ER/FB-650 ATB-115

SYSTEM TROUBLESHOOTING

A. Symptom: Green LED indicator marked "Power" does not come on when power is applied to the CBC-200 Controller.

Probable Cause	Solution
No Power is applied to the Control	• Check that AC power is applied to the control. • Incorrect wiring on AC power to the control. • Check for 120 VAC at Terminals 2 and 3 with an AC Voltmeter.
Optional line fuse is blown	• Check for blown fuse – replace.
Indicator LED is defective	• Check for 120 VAC at Terminals 2 and 3 of the control. • Check for output voltage at output terminals for Channel 1 and Channel 2. If voltage is not present, replace control or board.

B. Symptom: Red LED marked "short" illuminates

Probable Cause	Solution
Shorted magnet coil	• Check resistance of magnet coil used and replace if necessary.
Wiring between control and magnet shorting	• Check for shorted conditions in wiring between the magnets and the control, and wiring to chassis ground.
Improper magnet coil voltage	• Check magnet for proper coil voltage rating.
Transient noise	• Check for source of transient noise and suppress. Wire control using shielded cables. Segregate wiring runs.

C. Symptom: Magnets do not engage when power is applied.

Probable Cause	Solution
External switching improperly wired	• Check wiring and switch connections and rewire if necessary.
Torque adjust set to zero (0)	• Set torque adjustment potentiometer to maximum level.
Current range switch improperly set	• Check DIP Switch settings per chart and reset if required.
No power applied to the control	• Refer to Symptom A above.
System incorrectly wired	• Check wiring per the wiring diagram and rewire if necessary.
Fail safe brake used in place of power applied brake	• Check to insure that a fail safe brake is not being used in place of a power applied brake. Replace brake with correct brake.

D. Symptom: Magnets do not disengage when power is removed

Probable Cause	Solution
External switches incorrectly wired	• Check wiring of switching circuits and rewire if necessary.
Fail safe brake magnet being used	• Check to see if fail safe brake is being used in place of power applied brake.
Faulty control	• Replace control and see if problem is resolved.

E. Symptom: Magnets do not appear to have enough torque

Probable Cause	Solution
DIP Switch improperly set	• Check DIP switch setting per chart and reset if necessary.
Magnets incorrectly wired	• Check wiring between control and magnets and rewire if required.
Torque adjust potentiometer set too low	• Check setting of torque adjust potentiometer and set to maximum if required.
Magnets are incorrectly sized	• Verify sizing is correct by repeating selection process.

WARRANTY

Warner Electric LLC warrants that it will repair or replace (whichever it deems advisable) any product manufactured and sold by it which proves to be defective in material or workmanship within a period of one (1) year from the date of original purchase for consumer, commercial or industrial use.

This warranty extends only to the original purchaser and is not transferable or assignable without Warner Electric LLC's prior consent.

Warranty service can be obtained in the U.S.A. by returning any defective product, transportation charges prepaid, to the appropriate Warner Electric LLC factory. Additional warranty information may be obtained by writing the Customer Satisfaction Department, Warner Electric LLC, 449 Gardner Street, South Beloit, Illinois 61080, or by calling 815-389-3771.

A purchase receipt or other proof of original purchase will be required before warranty service is rendered. If found defective under the terms of this warranty, repair or replacement will be made, without charge, together with a refund for transportation costs. If found not to be defective, you will be notified and, with your consent, the item will be repaired or replaced and returned to you at your expense.

This warranty covers normal use and does not cover damage or defect which results from alteration, accident, neglect, or improper installation, operation, or maintenance.

Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Warner Electric LLC's obligation under this warranty is limited to the repair or replacement of the defective product and in no event shall Warner Electric LLC be liable for consequential, indirect, or incidental damages of any kind incurred by reason of the manufacture, sale or use of any defective product. Warner Electric LLC neither assumes nor authorizes any other person to give any other warranty or to assume any other obligation or liability on its behalf.

WITH RESPECT TO CONSUMER USE OF THE PRODUCT, ANY IMPLIED WARRANTIES WHICH THE CONSUMER MAY HAVE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL CONSUMER PURCHASE. WITH RESPECT TO COMMERCIAL AND INDUSTRIAL USES OF THE PRODUCT, THE FOREGOING WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED BY OPERATION OF LAW OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Changes in Dimensions and Specifications

All dimensions and specifications shown in Warner Electric catalogs are subject to change without notice. Weights do not include weight of boxing for shipment. Certified prints will be furnished without charge on request to Warner Electric.



The proper selection and application of products and components, including assuring that the product is safe for its intended use, are the responsibility of the customer. To view our Application Considerations, please visit <https://www.regalrexnord.com/Application-Considerations>.

To view our Standard Terms and Conditions of Sale, please visit <https://www.regalrexnord.com/Terms-and-Conditions-of-Sale>.

"Regal Rexnord" is not indicative of legal entity. Refer to product purchase documentation for the applicable legal entity.

Regal Rexnord and Warner Electric are trademarks of Regal Rexnord Corporation or one of its affiliated companies.

© 2017, 2026 Regal Rexnord Corporation, All Rights Reserved. MCM-P-2105-WE-EN-US 09/26

