







5







Gearboxes & Lubrication

Standard mounting positions	55
Position of the terminal box	57
Position of the terminal box and the cable entry points (BG and BF)	57
Position of the terminal box and the cable entry points (BK and BS)	58
Gearboxes	59
Radial and axial forces at the output shaft	59
Dimensions and fits of output shafts and keyways	59
Installing transmission elements	59
Gear with solid shaft	59
Gear with hollow shaft	59
Shrink disc coupling	59
Torque restraint	60
Notes for installing shaft mount gears with hollow shaft and keyway	60
Gear ventilation	60
Output shaft seals	60
Lubricants	61
Lubricant quantities	62
Lubricant quantities, BG-series gears	63
Lubricant quantities, BG20-01R	64
Lubricant quantities, BF-series gears	65
Lubricant quantities, BK-series gears	66
Lubricant quantities, BS-series gears	67
Lubricant quantities, pre-stage gears (Z)	68
Lubrication quantity for intermediate gear	69
Threaded plugs	70
Position of threaded plugs	70
-BG-series gears	70
-BG-20-01R	71
-BF-series gears	72
-BK-series gears	73
-BS-series gears	75
-pre-stage gears (Z)	75
-in the System Cover Design with Standard Geared Motor	76
-in the System Cover Design with foreign motor or gear design with input shaft	77

BG series

						
	↑	↑	↑	↑	↑	↑
Gear side	(U)	(R)	(L)	(O)	(V)	(H)
Mounting position	H4	H1	H2	H3	V1	V2







BF series

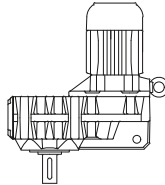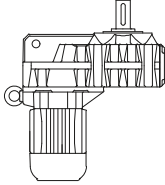						
Gear side	(R)(R)	(L)(L)	(O)	(U)	(V)	(H)
Mounting position	H1 H1	H2 H2	H3 H3	H4 H4	V1 V1	V2 V2







Gearboxes & Lubrication

Standard mounting positions

BK series



						
Gear side	(U)	(O)	(R)	(L)	(V)	(H)
Mounting position	H1	H2	H3	H4	V1	V2

BS series

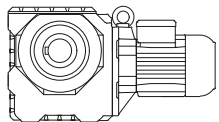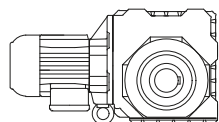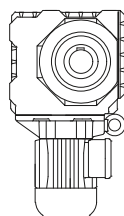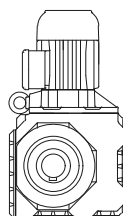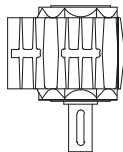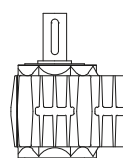						
Gear side	(U) ^(U)	(O) ^(O)	(R) ^(R)	(L) ^(L)	(V) ^(V)	(H) ^(H)
Mounting position	H1	H2	H3	H4	V1	V2

Position of the terminal box and the cable entry points (BG and BF)

The standard position of the terminal box for helical-gear and shaft-mounted geared motors is position I. Cables may be introduced from side A or C.

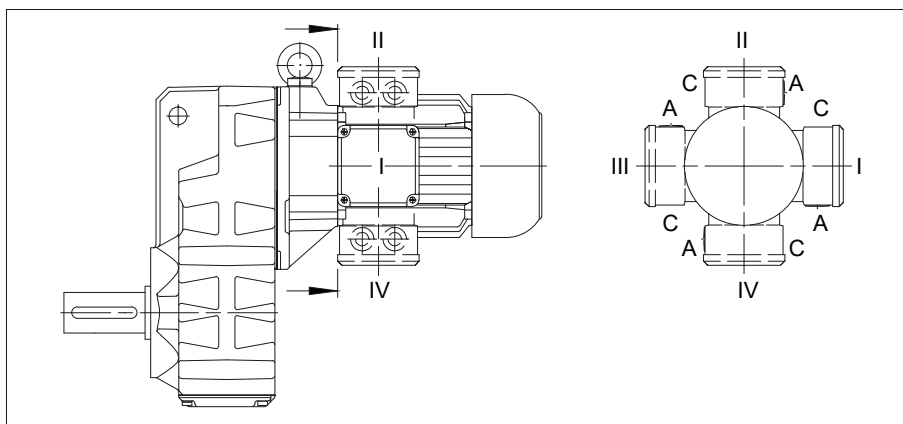
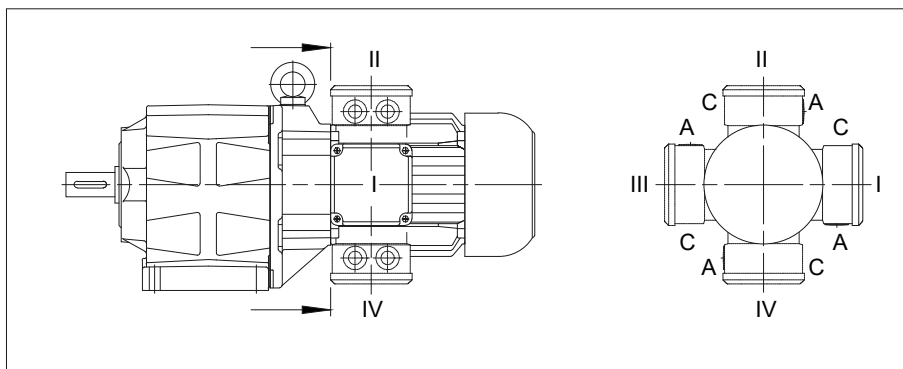


Turning or rotating the gearbox in space in the different mounting positions according to DIN 42950 does not influence the marking as shown. The details of the terminal box always show the position of the terminal box and the cable entry in relation to the gearbox and not in space. The mounting according to DIN 42950 is to be given separately.

Position of the terminal box and the cable entry points (BK and BS)

The standard position of the terminal box for bevel-geared and worm-geared motors is position II.

Cable entry through side A or side C is possible

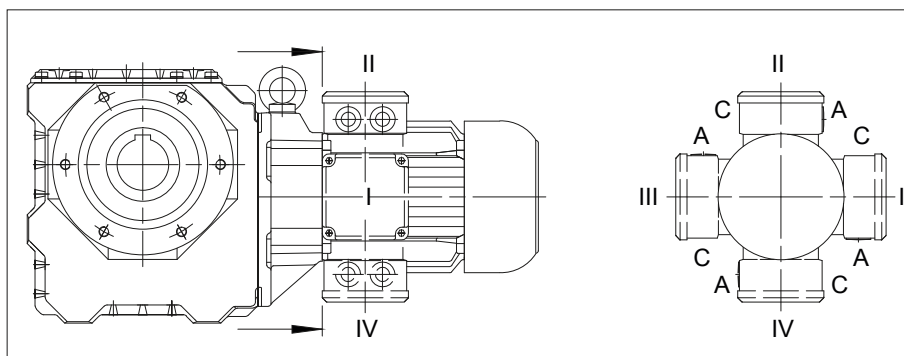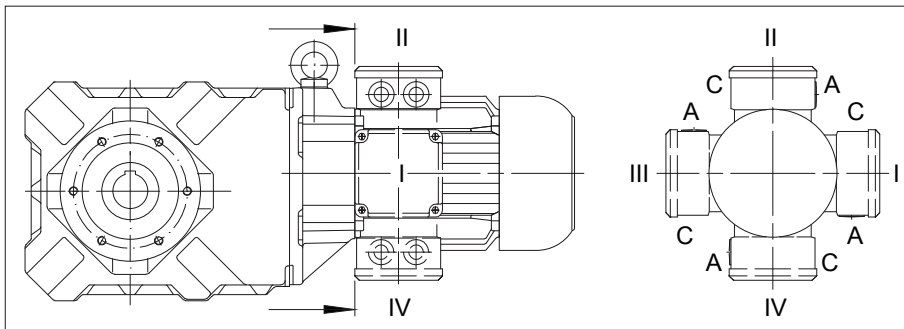

Turning or rotating the gearbox in space in the different mounting positions according to DIN 42950 does not influence the marking as shown. The details of the terminal box always show the position of the terminal box and the cable entry in relation to the gearbox and not in space. The mounting according to DIN 42950 is to be given separately.

Radial and axial forces at the output shaft

The output shafts and output-shaft bearings are matched to the motor torques. It is advisable to locate the drive-transmission element's point of application as close as possible to the shaft collar to ensure that the load imposed by external radial forces is not unnecessarily high. Permissible values for radial forces referred to the output shaft centreline are listed in the selection tables. Please consult us if your application involves extra-high axial loading.

Dimensions and fits of output shafts and keyways

Output shaft and second shaft stub, keyway and key are in compliance with the DIN standards and ISO fits listed below:

Solid shaft

Shaft diameter	to D = 50 mm in ISO k6 (DIN 748 Page 1) as of D = 50 mm in ISO m6 (DIN 748 Page 1)
Keyway	ISO P9 (DIN 6885 Page 1)
Key, height	ISO h9 (DIN 6885 Page 1 and DIN 6880)
Bore - customer	ISO H7

Hollow shaft with keyway

Bore diameter	ISO H7 (DIN 748)
Keyway	ISO JS9 (DIN 6885 Page 1)
Key, height	ISO h9 (DIN 6885 Page 1 and DIN 6880)
Customer shaft	ISO h6

Hollow shaft for shrink-on disc coupling (SSV)

Outside diameter	ISO f7
Inside diameter	ISO H7
Customer shaft	ISO h6

Installing transmission elements

Note:

Gearboxes using torque reaction by means of a flange (Code 2.; 3; 4.; 7.; 8.) or torque arm (Code 5.), must have the side for the torque reaction the same as where the radial force on the output shaft occurs (see rubber buffers for torque arms)! Please consult the factory for other designs.

Gear with solid shaft

Always exercise meticulous care when fitting transmission elements onto output shafts and, whenever possible, use the DIN 332 tapped bore provided for this purpose. Fitting is usually easier if the transmission element can be heated to approximately 100° C for installation. Dimension the locating bore to ISO H7.

Gears with solid shaft at each end (gear code -.3/): alignment of the two keys is subject to the DIN 7168 tolerances, the degree of accuracy is "fine".

Gear with hollow shaft

Hollow shafts usually engage solid shafts of the driven machinery. The gear unit must be mounted such as to be free of constraint and be fixed axially (e.g. by means of assembly help acc. following description "notes for installing shaft mount gears with hollow shaft and keyway"). Special contract provision must be made if the hollow shaft has to guide the solid shaft or, for any other reason, close out-of-round tolerance referenced to a point on the gear housing (such as a flange, for instance) is required.

Shrink disc coupling

A shrink disc coupling (SSV) can transmit high torque from the non-grooved hub to the smooth shaft. The SSV is easily secured and released, using commercially available bolts. SSVs are the ideal supplement for shaft mount gears. The maximum transmittable torque for the selected shrink discs when fitted and mounted according to instructions is above the starting torque of the respective motors classified as standard (for classification of shrink disc sizes see chapter 11, 12, 13 "Additional dimensional drawings for Shrink disc coupling")

Torque restraint

Shaft-mounted geared motors require a suitable torque restraint to resist the reaction torque. Shaft-mounted gears have cast torque arms as standard. Bevel gears and worm gears are available with bolt-on torque arms on request. The torque arm is screwed onto the front “V” on the side of the gear unit. It is always important to ensure that the torque arm does not create excessive constraining forces due to the driven shaft running untrue, for example. Excessive play can result in excessive shock torques in switching or reversing operations. Consequently, we recommend the use of pre-tensioned rubber damping elements. These rubber buffers are part of the scope of supply for designs with a torque arm (see chapter 11, 12, 13 dimensional drawings “Rubber buffer for torque restraint”)

Notes for installing shaft mount gears with hollow shaft and keyway

(1) Attaching the hollow shaft to the customer shaft

Threaded bolt (d) is screwed into the end thread of the shaft to be driven. By tightening the nut, apply force to thrust plate (b) and locating ring (c) to draw the gear unit onto the shaft.


(2) Axial fastening

Pressure piece (b) is rotated and fitted against retaining ring (c) using fixing screw (a).

(3) Removing

Extractor (f) is fitted between the end face of the shaft and retainer ring (c). Tighten press-off screw (e) against the end of the shaft and pull the gear unit off the shaft.

Manufacturing drawings for the required parts are available on request. These parts are not included in the scope of supply.

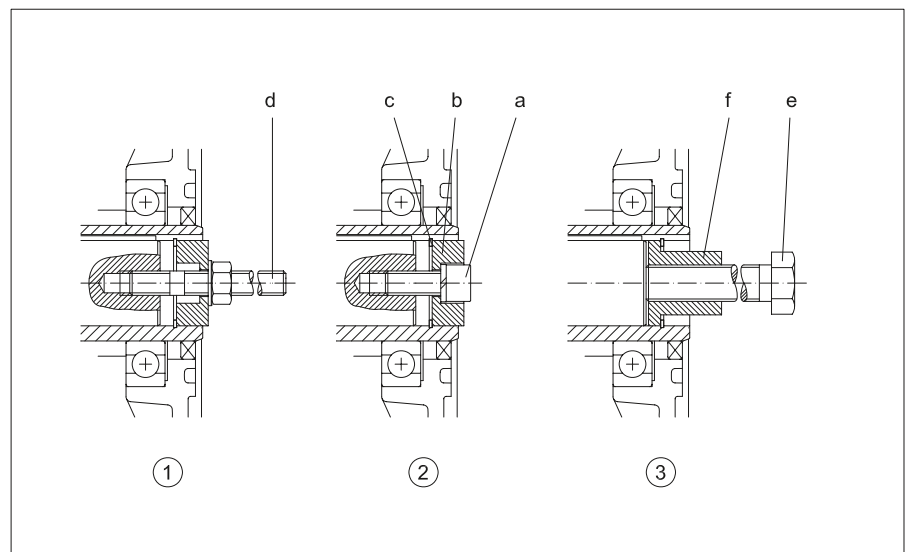

Detailed information on shaft-mounted gear units, bevel-gear units and worm-gear units is available (see chapter 11, 12, 13 dimensional drawings “Tools for fitting shaft-mounted gear with hollow shaft and keyway”).

Gear ventilation

The lifetime of the gearbox lubricant increases the better it is protected from negative environmental influences. Should the oil level or the gearbox ratio cause a very high lubricant temperature, the gearbox will be supplied as standard with a breather plug. Either on request or for corresponding high ambient temperatures, all gearboxes from size 10 can be supplied with a breather plug.

For the position of the threaded plugs see chapter 5 the threaded plugs.

Output shaft seals

All size 10 and larger gears are available with double seals for the output shaft on request and at extra cost. Double seals are particularly effective if the output shaft points down and as protection against external influences

Lubricants

The drives are shipped ready-filled with gear lubricant. Lubricated in this way, the gear units are suitable for ambient temperatures in the range -20 °C to + 40 °C. The quantity of lubricant is optimised for the desired installed position as is stated on the nameplate. The type of lubricant is stated in the Operating Instructions. Lubricants for other temperature ranges or special applications available on request.

Wear-protective EP gear oils as indicated in the following table have proven particularly effective:

Manufacturer	Lubricant type					
	Mineral Oil	Synthetic Oil				USDA H1 Oil
	ISO VG 220	ISO VG 68		ISO VG 220	ISO VG 460	ISO VG 220
	Standard oil for gearboxes in the series BF06-BF90 BG04-BG100 BK60-BK90	Low temperature oil for gearboxes in the series BF06-BF90 BG04-BG100	BK06-BK90 BM09-BM40 BS02-BS40	Standard oil for gearboxes in the series BS02-BS10 BK06-BK10 BM09-BM40 High temperature oil for gearboxes in the series BS02-BS10 BK06-BK10 BF06-BF90 BG04-BG100 BK60-BK90 BM09-BM10	Standard oil for gearboxes in the series BS20-BS40 BK17-BK50 BM20-BM40 High temperature oil for gearboxes BS20-BS40 BK17-BK50 BM20-BM40	Food and Beverage Industry Oil for gearboxes in the series BF06-BF90 BG04-BG100 BK06-BK90 BM09-BM40 BS02-BS40
AGIP 	BLASIA 220 [13 02 08]	—	—	BLASIA S 220 [13 02 06]	BLASIA S 460 [13 02 06]	—
BECHEM RHUS 	STAROIL G 220 [13 02 08]	—	BERUSYNTH EP 68 [13 02 06]	BERUSYNTH EP 220 [13 02 06]	BERUSYNTH EP 460 [13 02 06]	BERUSYNTH EP 220 H1 [13 02 06]
CASTROL 	ALPHA EP 220 [13 02 08] ALPHA SP 220 [13 02 08] OPTIGEAR EP 220 [13 02 08] OPTIGEAR 1100/220 [13 02 08]	Alphasyn T68 [13 02 06]	—	ALPHASYN PG 220 [13 02 06] OPTIGEAR 800/220 [13 02 06] OPTIGEAR 1300/220 [13 02 06] ALPHASYN GS 220 [13 02 06]	ALPHASYN PG 460 [13 02 06] OPTIGEAR 800/460 [13 02 06] OPTIGEAR 1300/460 [13 02 06] ALPHASYN GS 460 [13 02 06]	OPTILEB GT 220 (CLP-HC) [13 02 06] OPTILEB GT 1800/220 (CLP-PG) [13 02 08]
CHEVRON	Meropa 220 [13 02 08] GEARTEX EP-A SAE 85W-90 [13 02 06]	—	Meropa Synlu-be WS 68 [13 02 06]	Meropa Synlube WS 220 [13 02 06]	Meropa Synlube WS 460 [13 02 06]	Chevron lubricating oils FM 220 (USA) [13 02 06]
FUCHS 	RENOLIN CLP 220 [13 02 08] RENOLIN CLPF 220 SUPER [13 02 08] RENOLIN CLP 220 PLUS [13 02 08]	RENOLIN UNI-SYN CLP 68 [13 02 06]	RENOLIN PG 68 [13 02 06]	RENOLIN PG 220 [13 02 06]	RENOLIN PG 460 [13 02 06]	CASSIDA FLUID GL 220 [13 02 06]
KLÜBER 	KLÜBEROIL GEM 1-220 N [13 02 08]	—	KLÜBER-SYNTH GH 6-80 [13 02 06]	KLÜBERSYNTH GH 6-220 [13 02 06]	KLÜBERSYNTH GH 6-460 [13 02 06]	KLÜBEROIL 4UH1-220 N [13 02 06] KLÜBERSYNTH UH1 6-220 [13 02 06]
MOBIL 	MOBILGEAR 600 XP 220 [13 02 08]	MOBIL SHC 626 [13 02 06]	—	MOBIL SHC Gear 220 [13 02 06] MOBIL SHC 630 [13 02 06]	MOBIL SHC Gear460 [13 02 06] MOBIL SHC 634 [13 02 06]	MOBIL SHC CIBUS 220 [13 02 06]
OEST 	Gearol 220 [13 02 06]	—	—	—	—	—
SHELL	OMALA S2 GX220 [13 02 08]	—	—	OMALA S4 WE 220 [13 02 06]	OMALA S4 WE 460 [13 02 06]	—
TOTAL 	CARTER EP 220 [13 02 08] CARTER XEP 220 [13 02 06]	—	—	CARTER SY 220 [13 02 06]	CARTER SY 460 [13 02 06]	NEVASTANE SL220 [13 02 06] NEVASTANE EP 220 [13 02 06] NEVASTANE SY 220 [13 02 06]
WINTERSHALL	SRS ERSOLAN 220 [13 02 08]	—	—	—	—	—

[...] European Waste Catalogue Code (Decision 2001/118/CE)

Important:

Synthetic gear oils of a Polyglykol base (e.g. PGLP...) must be disposed of separately to mineral oil as **Special Waste**.

So long as the ambient temperature does not fall below $-20\text{ }^{\circ}\text{C}$ the international definition of the viscosity class at $40\text{ }^{\circ}\text{C}$ according to ISO 3448 and DIN 51519 ISO the viscosity class VG220 (SAE90) is recommended according, in North America AGMA 5EP.

For lower temperatures it is recommended to use oils of a lower nominal viscosity with a corresponding better starting characteristic, for instance a PGLP with a nominal viscosity VG68 (SAE80) or AGMA 2EP respectively. These types of oil can already be necessary at a temperature around the freezing point, if the break away torque of a drive is reduced by some smooth starting device or if the motor has a relatively low power

Lubricant quantities

The preferred quantity of lubricant for the planned type of installation is stated on the motor's rating plate (symbol "oil can"). When topping up care should be taken to ensure that, depending on the fitting position, gearwheels and rolling contact bearings positioned at the top are also properly oiled. In special versions the oil level mark should be noted. Information about the quantity of lubricant required for other types of installation can be obtained from the factory

Lubricant quantities, BG-series gears


Gear-housing with flange or foot

Flange (Code-2./Code-3./Code-4./Code-7.)

Foot with threaded holes (Code -6.)


Foot with clearance holes (Code-9.)

Completely machined (Code -8.)

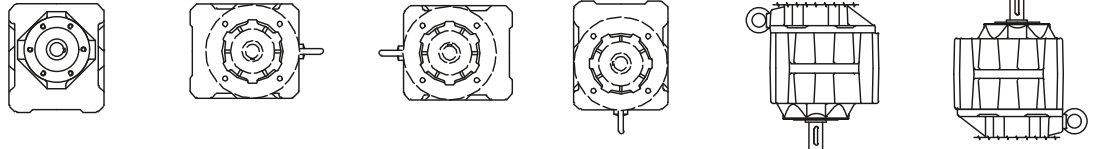

Foot housing

cast foot with clearance holes (Code -1.)





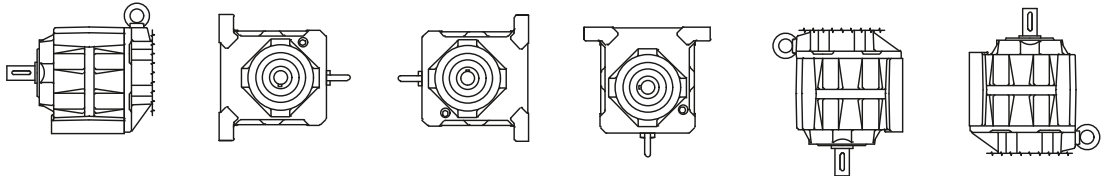


Gearbox type		H4	H1	H2	H3	V1	V2
BG06	*	0.08	0.08	0.08	0.08	0.15	0.15
	**	0.12	0.12	0.12	0.12	0.24	0.15
BG10	*	0.65	0.65	0.65	0.85	1.05	0.85
	**	0.45	0.45	0.45	0.6	0.75	0.6
BG15	**	0.4	0.4	0.4	0.35	0.62	0.55
BG20	*	0.8	0.8	0.8	1.1	1.4	1.1
	**	0.6	0.6	0.6	1.0	1.15	0.9
BG30	*	1.0	1.0	1.0	1.7	2.4	1.6
	**	1.0	1.0	1.0	1.7	2.3	1.7
BG40	*	1.7	1.7	1.7	2.5	3.5	2.1
	**	1.7	1.7	1.7	2.5	3.5	2.1
BG50	*	3.0	3.0	3.0	4.5	5.5	3.3
	**	3.0	3.0	3.0	4.5	5.5	3.3
BG60	*	5.5	5.5	5.5	7.0	10.9	6.4
	**	5.5	5.5	5.5	7.0	10.9	6.4
BG70		6.5	6.5	6.5	8.0	13.5	9.0
BG80		11.0	11.0	11.0	11.0	22.5	15.0
BG90		19.0	19.0	19.0	19.0	40.0	26.0
BG100		35.0	35.0	55.0	50.0	66.0	50.0
* Flange Housing							
** Foot Housing							
Lubrication quantity in litre							

Gearboxes & Lubrication


Lubricants

Lubricant quantities, BG20-01R

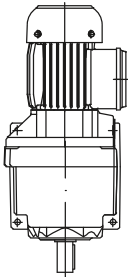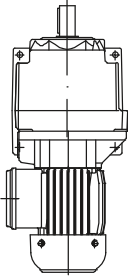						
Gear type	H4	H1	H2	H3	V1	V2
BG20R	0.8	1.0	0.8	1.4	1.65	1.0
Lubrication quantity in litre						

5


Lubricant quantities, BF-series gears

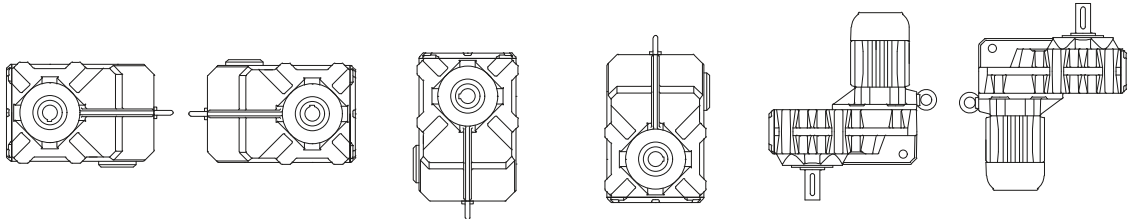						
Gear type	H1	H2	H3	H4	V1	V2
BF06	0.25	0.25	0.25	0.37	0.35	0.3
BF10	0.85	0.85	0.85	1.1	1.45	1.5
BF20	1.3	1.3	1.3	1.7	2.2	2.25
BF30	1.7	1.7	1.7	2.2	3.2	3.0
BF40	2.7	2.7	2.7	3.5	4.9	4.8
BF50	3.8	3.8	3.8	5.0	6.7	6.7
BF60	6.7	6.7	6.7	9.0	12.3	12.0
BF70	12.2	12.2	12.2	16.0	24.2	21.8
BF80	17.0	17.0	17.0	21.0	32.2	27.5
BF90	32.0	32.0	32.0	41.0	62.0	53.0
Lubrication quantity in litre						


Gearboxes & Lubrication

Lubricants

Lubricant quantities, BK-series gears

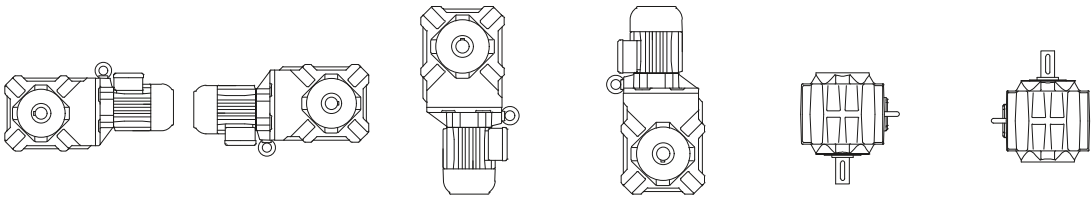						
Gear type	H1	H2	H3	H4	V1	V2
BK06	0.15	0.23	0.29	0.31	0.18	0.23
BK10	0.83	0.83	0.92	1.75	0.92	0.92
BK17	1.0	1.7	1.8	2.6	1.3	1.8
BK20	1.5	1.5	1.6	2.9	1.65	1.65
BK30	2.2	2.2	2.3	4.4	2.4	2.4
BK40	3.5	3.5	3.5	7.0	3.7	3.7
BK50	5.8	5.8	5.8	1.5	6.0	6.0
BK60	6.0	8.7	6.9	12.0	8.6	8.6
BK70	10.2	15.0	11.5	20.5	13.5	14.5
BK80	18.0	25.5	19.0	37.0	23.5	25.5
BK90	33.0	48.0	36.0	69.0	45.0	48.0
Lubrication quantity in litre						


Lubricant quantities, BS-series gears

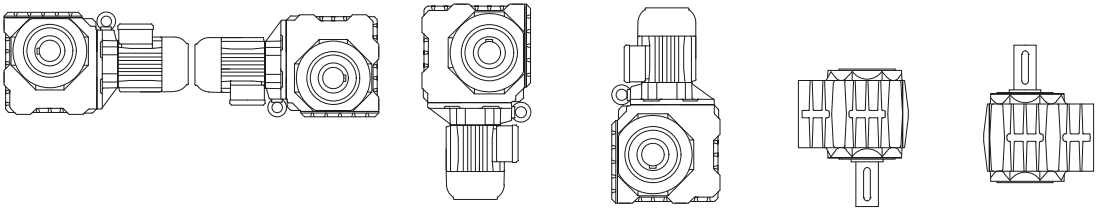						
Gear type	H1	H2	H3	H4	V1	V2
BS03	0.17	0.17	0.17	0.17	0.17	0.17
BS06	0.24	0.36	0.24	0.45	0.24	0.24
BS10	0.9	1.3	0.9	1.6	0.9	0.9
BS20	1.5	2.1	1.5	2.7	1.5	1.5
BS30	2.2	3.0	2.2	3.8	2.2	2.2
BS40	3.5	4.7	3.5	6.0	3.5	3.5
Lubrication quantity in litre						

Gearboxes & Lubrication

Lubricants

Lubricant quantities, pre-stage gears (Z)

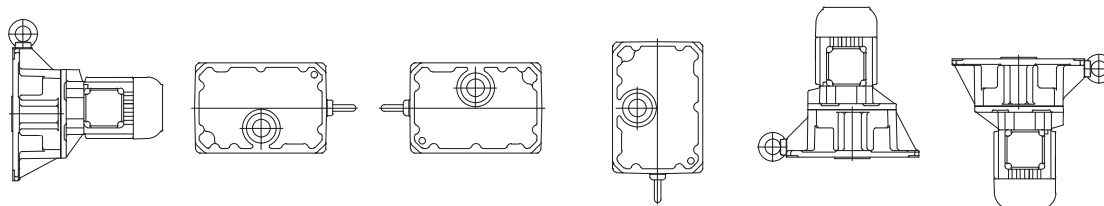

5

BF		H4	H1	H2	H3	V1	V2
BG							
BK		H1	V1	V2	H2	H4	H3
BS							
Gear type							
BG10Z BK10Z	BF10Z BS10Z	0.10	0.05	0.12	0.07	0.16	0.07
BG20Z BK20Z	BF20Z BS20Z	0.15	0.07	0.19	0.17	0.27	0.10
BG30Z BK30Z	BF30Z BS30Z	0.2*	0.10	0.35	0.22	0.35	0.19
BG40Z BK40Z	BF40Z BS40Z	0.32*	0.17	0.50	0.37	0.6	0.32
BG50Z BK50Z	BF50Z	0.5	0.3	0.92	0.7	1.15	0.5
BG60Z BK60Z	BF60Z	0.9	0.5	1.55	1.1	2.0	0.7
BG70Z BK70Z	BF70Z BF80Z	1.2	0.6	1.8	1.6	2.4	1.4
BG80Z BK80Z	BF90Z BG100Z	3.1	1.3	4.0	2.6	5.2	2.0
BG90Z BK90Z		4.2	1.5	5.4	3.5	7.7	3.0
*: with BM30Z/BM40Z the pre-stage lubricant is filled via the main gearbox.							
Lubrication quantity in litre							


Lubrication quantity for intermediate gear

Definition of the terminal box position

Terminal box position for intermediate gear is similar to the main gearbox that means

Main gearbox BG, BF terminal box pos. I -> intermediate gearbox terminal box pos. I


Main gearbox BK, BS terminal box pos. II -> intermediate gearbox terminal box pos. II

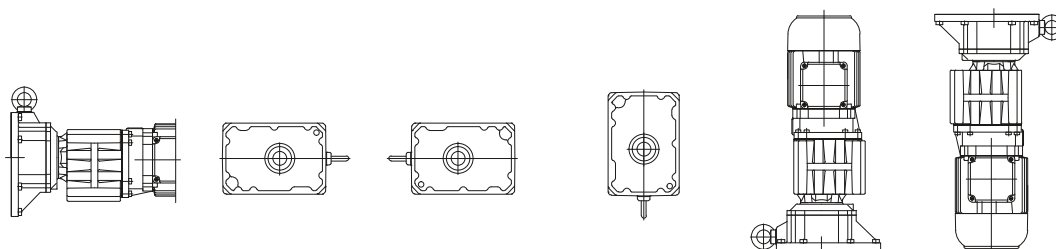

Mounting position of main gearbox	BF	H4	H1	H2	H3	V1	V2
	BG	B3/B5	B6	B7	B8	V5/H5	V6/H6
	BK	H1	V1	V2	H2	H4	H3
	BS						
Type designation of double gearbox combination							
BG10G06 BK10G06	BF10G06 BS10G06	0,08	0,08	0,08	0,08	0,15	0,15
BG20G06 BK20G06	BF20G06 BS20G06	0,08	0,08	0,08	0,08	0,15	0,15
BG30G06 BK30G06	BF30G06 BS30G06	0,08	0,08	0,08	0,08	0,15	0,15
BG40G10 BK40G10	BF40G10 BS40G10	0,65	0,65	0,65	0,85	1,05	0,85
BG50G10 BK50G10	BF50G10	0,65	0,65	0,65	0,85	1,05	0,85
BG60G20 BK60G20	BF60G20	0,8	0,8	0,8	1,1	1,4	1,1
BG70G20 BK70G20	BF70G20	0,8	0,8	0,8	1,1	1,4	1,1
BG80G40 BK80G40	BF80G40	1,7	1,7	1,7	2,5	3,3	2,1
BG90G50 BK90G50	BF90G50 BG100G50	3,0	3,0	3,0	4,5	5,5	3,3
Lubrication quantity in litre							

Position of threaded plugs

-BG-series gears




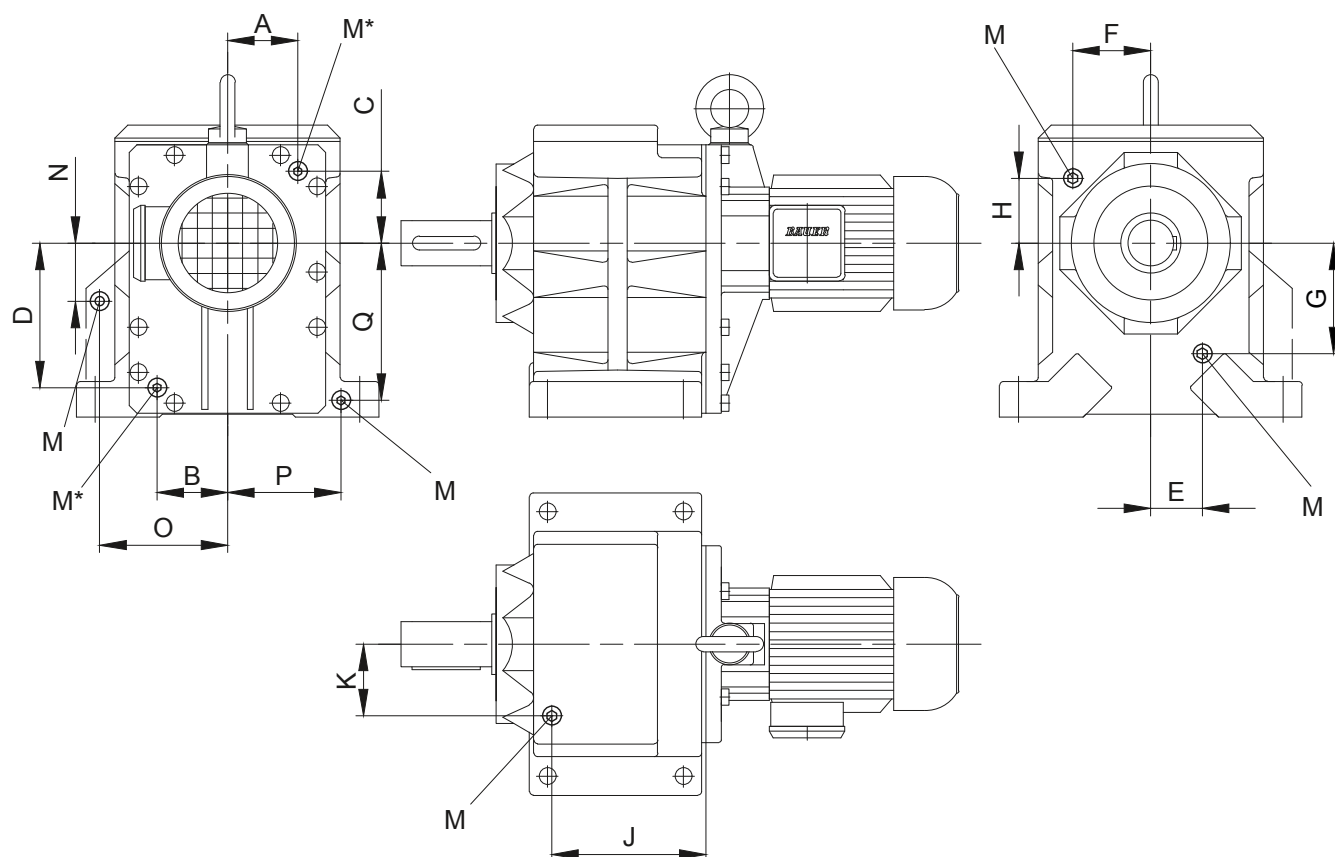


Typ		A	B	C	D	E	F	G	H	J	K	N	O	P	Q	M
BG10	Foot housing	see position of the oil drain and filler plugs on the system cover	Tab.I-Tab.III size B.10			33	42	48	41.5	-	-	-	-	-	-	M10x1
BG10	Flange housing		Tab.I-Tab.III size B.10			27	-	73	-	-	-	-	-	-	-	M10x1
BG15	Foot housing		Tab.I-Tab.III size B.10			-	-	-	-	-	-	-	-	-	-	-
BG20	Foot housing		Tab.I-Tab.III size B.20			-	47	-	52.5	-	-	-	-	-	-	M10x1
BG20	Flange housing		Tab.I-Tab.III size B.20			-	28	-	68	-	-	-	-	-	-	-
BG30	Foot housing		Tab.I-Tab.III size B.30			-	54	-	58	-	-	-	-	-	-	M10x1
BG30	Flange housing		Tab.I-Tab.III size B.30			-	58	-	48	-	-	-	-	-	-	M10x1
BG40	Foot housing		Tab.I-Tab.III size B.40			-	75	-	48	-	-	-	-	-	-	M14x1.5
BG40	Flange housing		Tab.I-Tab.III size B.40			-	75	-	48	-	-	-	-	-	-	M14x1.5
BG50	Foot housing		Tab.I-Tab.III size B.50			-	53	-	100	-	-	-	-	-	-	M14x1.5
BG50	Flange housing		Tab.I-Tab.III size B.50			-	53	-	100	-	-	-	-	-	-	M14x1.5
BG60	Foot housing		Tab.I-Tab.III size B.60			-	70	-	119	-	-	-	-	-	-	M20x1.5
BG60	Flange housing		Tab.I-Tab.III size B.60			-	70	-	119	-	-	-	-	-	-	M20x1.5
BG70			Tab.I-Tab.III size B.70			-	103	-	86	204	95	-	-	-	-	M20x1.5
BG80			Tab.I-Tab.III size B.80			-	133	-	110	237	111	-	-	-	-	M20x1.5
BG90			Tab.I-Tab.III size B.90			-	165	-	124	297	140	-	-	-	-	M24x1.5
BG100			Tab.I-Tab.III size B.80			-	202	-	128	420	165	135	263	202	293	M24x1.5

M = Plug according to DIN 908
Dimensions in millimetres (mm)

M* = Size and position of the drain plug see page 76.

Position of threaded plugs -BG-20-01R

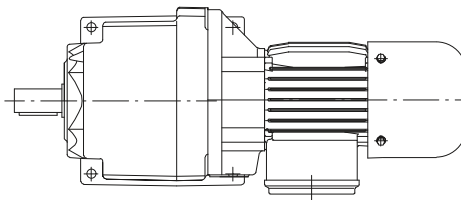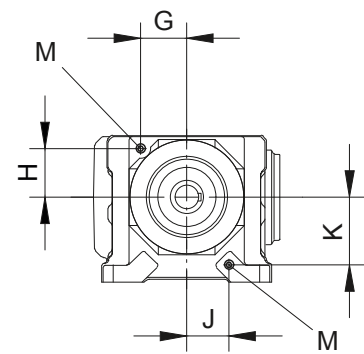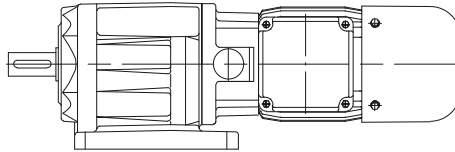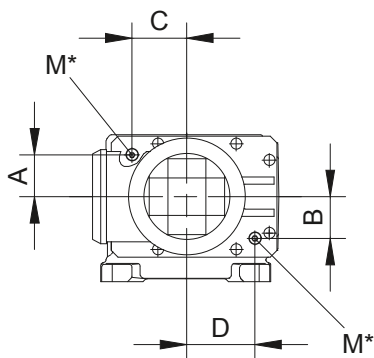

5

Type	A	B	C	D	G	H	J	K	M
BG20-01R Roller table	see position of the oil drain and filler plugs on the system cover Tab.I-Tab.III size B20				48.5	51.5	45	71.5	M10x1
M = Plug according to DIN 908 Dimensions in millimetres (mm)									


M* = Size and position of the drain plug see page 76.

Threaded plugs

Position of threaded plugs

-BF-series gears

5

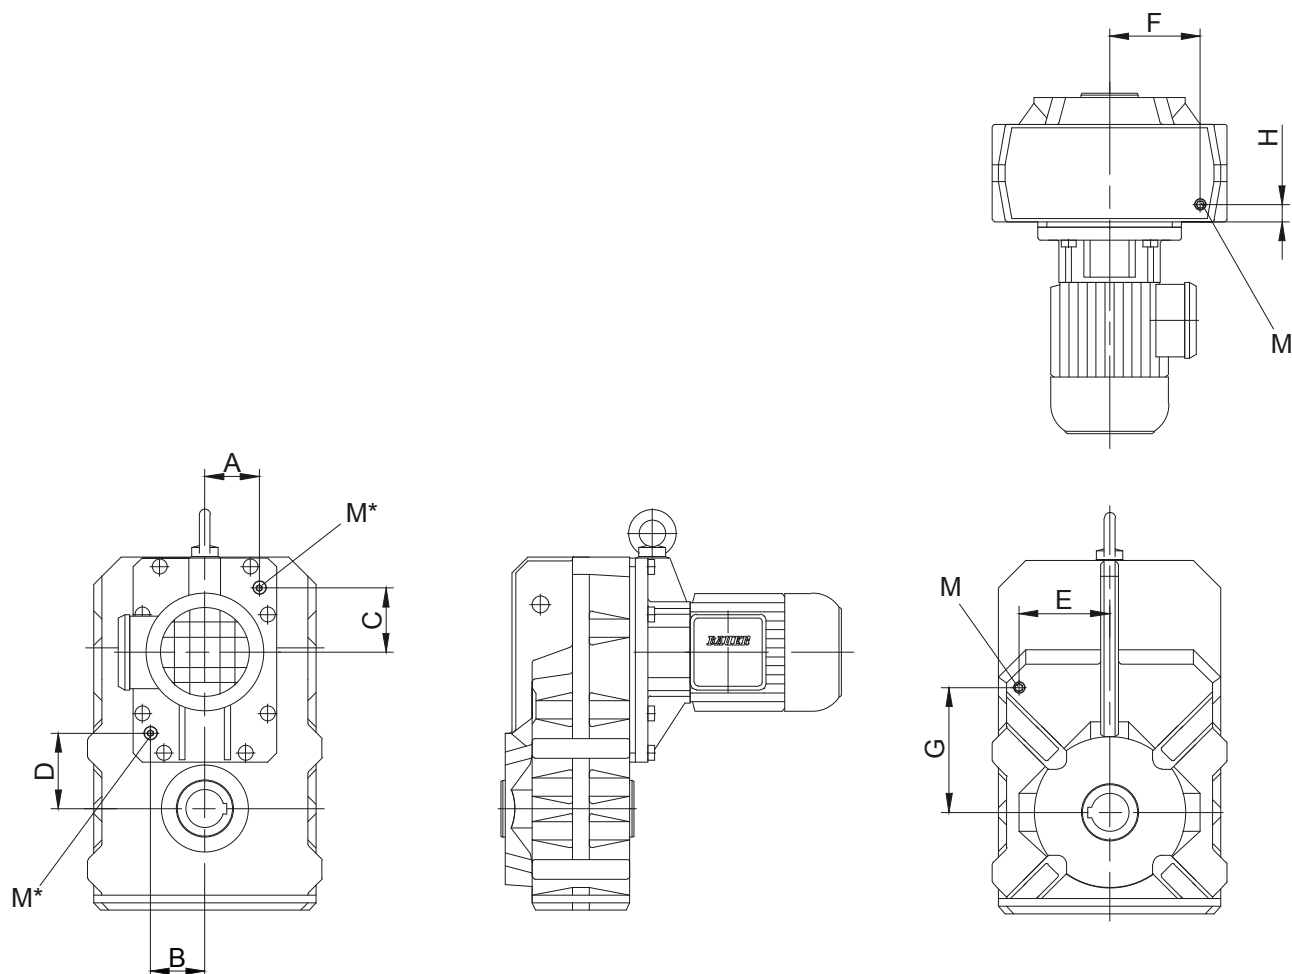


Type	A	B	C	D	E	F	G	H	M
BF06	see position of the oil drain and filler plugs on the system cover	on request							
BF10		Tab.I-Tab.III size		B.10	64	65	97	28	M10x1
BF20		Tab.I-Tab.III size		B.20	77	70	115	30.5	M10x1
BF30		Tab.I-Tab.III size		B.30	88	82	125	36.5	M10x1
BF40		Tab.I-Tab.III size		B.40	100	86	141	33	M14x1.5
BF50		Tab.I-Tab.III size		B.50	120	105	165	42.3	M14x1.5
BF60		Tab.I-Tab.III size		B.60	140	145	200	50.5	M20x1.5
BF70		Tab.I-Tab.III size		B.70	165	177	235	52.5	M20x1.5
BF80		Tab.I-Tab.III size		B.70	145	148	255	123	M20x1.5
BF90		Tab.I-Tab.III size		B.80	155	176	347.5	260	M24x1.5
M = Plug according to DIN 908									
Dimensions in millimetres (mm)									


M* = Size and position of the drain plug see page 76.

Position of threaded plugs -BK-series gears

BK10 - BK50

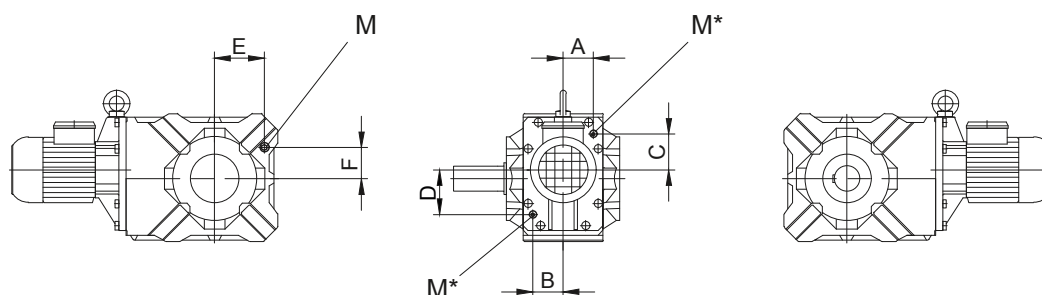

BK60 - BK90

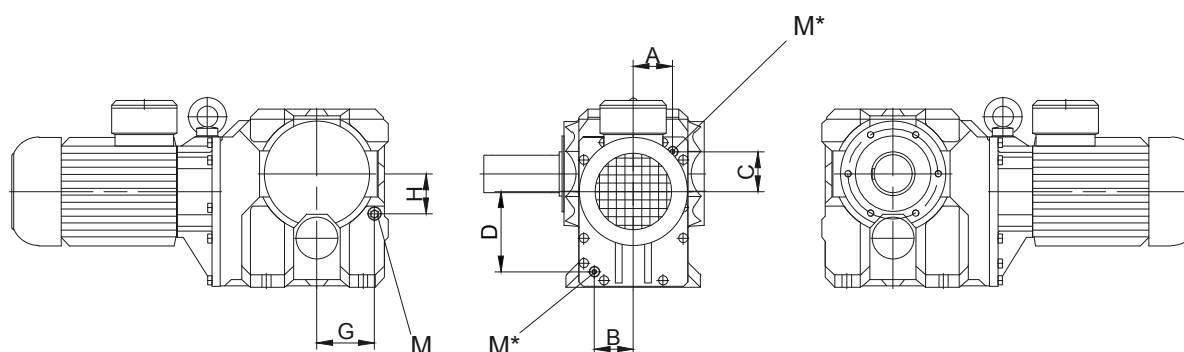


Type	A	B	C	D	E	F	G	H	M
BK06	see position of the oil drain and filler plugs on the system cover	on request							
BK10		Tab.I-Tab.III size B.10		62	32.5	-	-	M10x1	
BK20		Tab.I-Tab.III size B.20		73.5	37.5	-	-	M10x1	
BK30		Tab.I-Tab.III size B.30		80	43	-	-	M10x1	
BK40		Tab.I-Tab.III size B.40		88	49	-	-	M14x1.5	
BK50		Tab.I-Tab.III size B.50		118	74	-	-	M14x1.5	
BK60		Tab.I-Tab.III size B.60		-	-	93	87	M20x1.5	
BK70		Tab.I-Tab.III size B.70		-	-	137	95	M20x1.5	
BK80		Tab.I-Tab.III size B.80		-	-	150	117	M20x1.5	
BK90		Tab.I-Tab.III size B.90		-	-	208	135	M24x1.5	
M = Plug according to DIN 908 Dimensions in millimetres (mm)									

M* = Size and position of the drain plug see page 76.


Threaded plugs

Position of threaded plugs -BS-series gears

BS10 - BS20

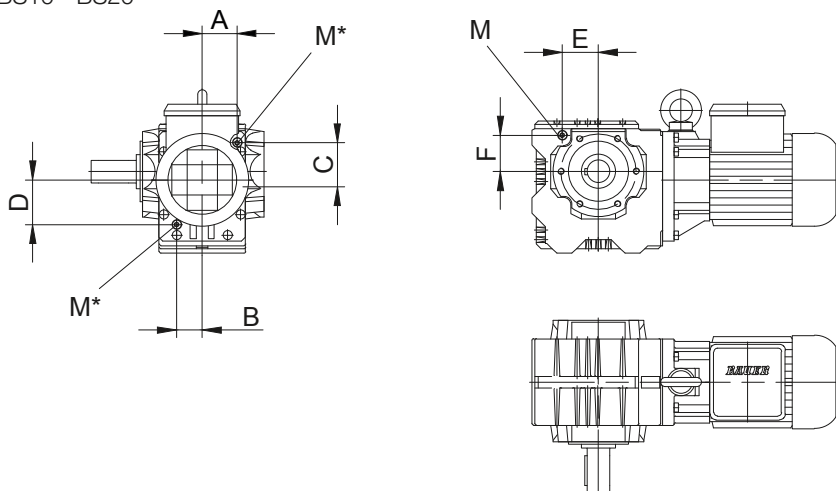


BS30 - BS40

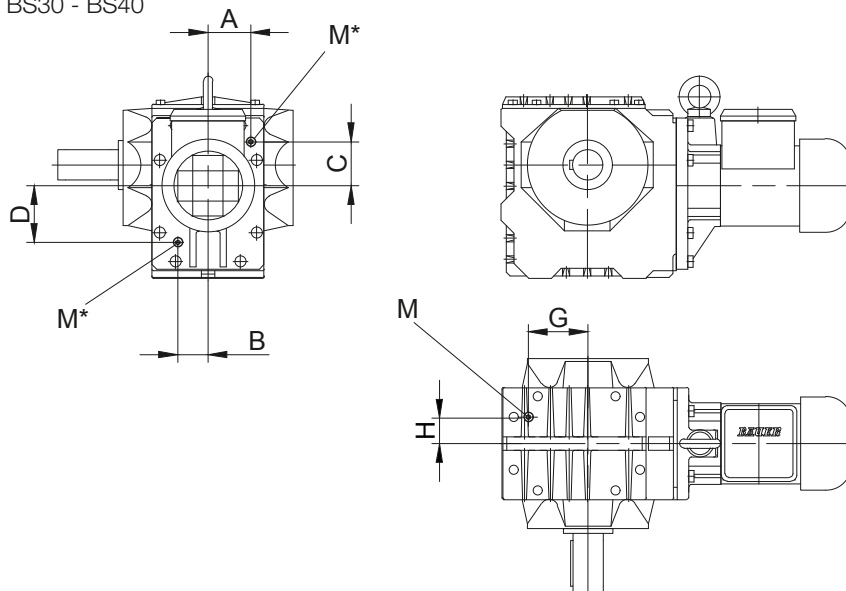

Type	A	B	C	D	E	F	G	H	M
BS10	see position of the oil drain and filler plugs on the system cover	Tab.I-Tab.III size B.10			48	50	-	-	M10x1
BS20		Tab.I-Tab.III size B.20			59	63	-	-	M10x1
BS30		Tab.I-Tab.III size B.30			-	-	79	35	M10x1
BS40		Tab.I-Tab.III size B.40			-	-	93.5	41.5	M14x1.5
M = Plug according to DIN 908 Dimensions in millimetres (mm)									

M* = Size and position of the drain plug see page 76.

Position of threaded plugs -pre-stage gears (Z)

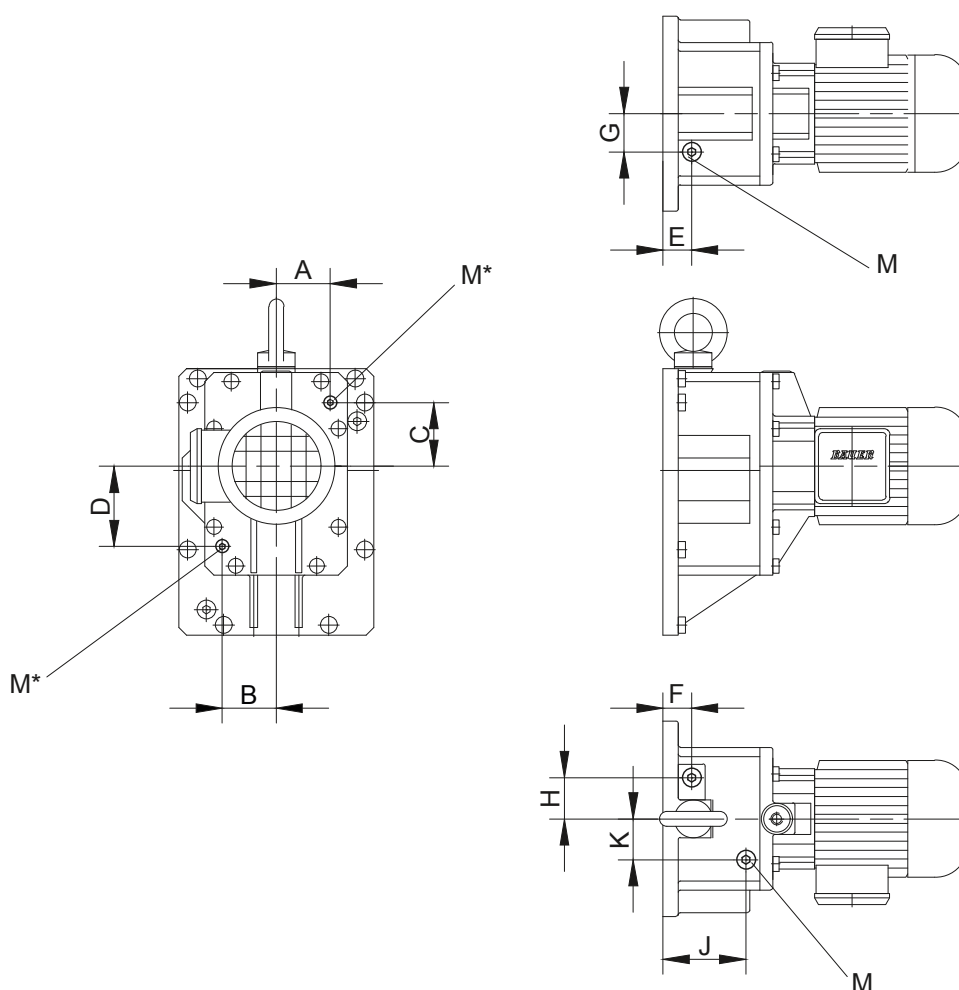

Gear	A	B	C	D	E	F	G	H	J	K	M
BG10(Z);BK10(Z)	-	-	-	-	25	-	17.5	-	44	25	M10x1
BF10(Z);BS10(Z)											
BG20(Z);BK20(Z)	-	-	-	-	49	-	28.5	-	23.5	28	M10x1
BF20(Z);BS20(Z)											
BG30(Z);BK30(Z)	see position of the oil drain and filler plugs on the system cover	Tab.I and Tab.III size B10			-	24	-	30	-	-	M10x1
BF30(Z);BS30(Z)											
BG40(Z);BK40(Z)		Tab.I and Tab.III size B20			-	27.5	-	36.5	-	-	M14x1.5
BF40(Z);BS40(Z)											
BG50(Z);BK50(Z)		Tab.I and Tab.III size B30			-	-	-	-	29	43	M14x1.5
BF50(Z)											
BG60(Z);BK60(Z)		Tab.I and Tab.III size B40			-	33	-	48	-	-	M20x1.5
BF60(Z)											
BG70(Z);BK70(Z)		Tab.I and Tab.III size B50			-	38	-	55	-	-	M20x1.5
BF70(Z);BF80(Z)											
BG80(Z);BK80(Z)		Tab.I and Tab.III size B60			-	45	-	-	-	-	M20x1.5
BF90(Z);BG100(Z)											
BG90(Z);BK90(Z)	Tab.I and Tab.III size B70			-	-	-	-	-	-	-	M24x1.5

M = Plug according to DIN 908
Dimensions in millimetres (mm)

M* = Size and position of the drain plug see page 76.

Position of threaded plugs

-in the System Cover Design with Standard Geared Motor

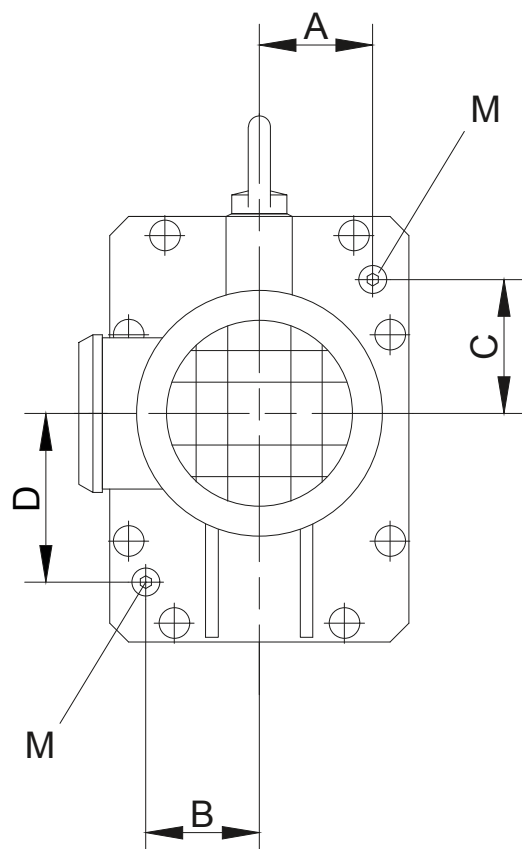


Table I: Design with Standard Geared Motor


Gear	Size	A	B	C	D	M
BG10(Z); BK10(Z); BF10(Z);BS10(Z)	D05-D..09	36	34	43.5	59	M10x1
BG15	D05-D..09	36	34	43.5	59	M10x1
BG20(Z); BK20(Z); BF20(Z);BS20(Z)	D05-D..09	44	44	58	72.5	M10x1
BG30(Z); BK30(Z); BF30(Z);BS30(Z)	D05-D..09	56.5	40	58.2	75	M10x1
BG40(Z); BK40(Z); BF40(Z);BS40(Z)	D..08-D..11	66	71	71	94	M14x1.5
BG50(Z); BK50(Z); BF50(Z);	D..08-D..11	72	74	85	109	M14x1.5
BG60(Z); BK60(Z); BF60(Z);	D..13-D..16	78	74	82	109	M14x1.5
BG70(Z); BK70(Z); BF70(Z);BF80(Z)	D..09-D..18	84	81	120	155	M20x1.5
BG80(Z); BK80(Z); BF90(Z);BG100(Z)	D..16	86	81	120	155	M20x1.5
BG90(Z); BK90(Z);	D..09-D..18	95	85	97	193	M20x1.5
	D..11-D..18	118	118	110	245	M20x1.5
	D..13-D..18	145	145	116	294	M24x1.5

M = Plug according to DIN 908
Dimensions in millimetres (mm)

Position of the drain plugs for BG, BK, BS and BF gear ranges and pre-stages.

Position of threaded plugs

-in the System Cover Design with foreign motor or gear design with input shaft

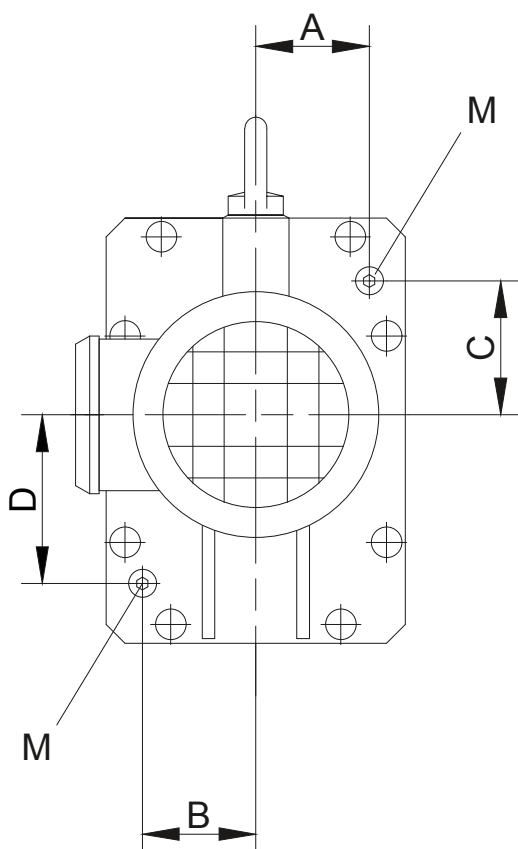

5

Table II: Design with foreign motor or gear design with input shaft

Gear	A	B	C	D	M
BG10(Z); BK10(Z); BF10(Z);BS10(Z)	1.34	1.34	1.59	2.24	M10x1
BG15	1.34	1.34	1.59	2.24	M10x1
BG20(Z); BK20(Z); BF20(Z);BS20(Z)	1.73	1.73	2.24	2.83	M10x1
BG30(Z); BK30(Z); BF30(Z);BS30(Z)	2.30	1.61	2.27	3.03	M10x1
BG40(Z); BK40(Z); BF40(Z);BS40(Z)	2.72	2.87	2.76	3.82	M14x1.5
BG50(Z); BK50(Z); BF50(Z);	2.95	2.95	3.23	4.33	M14x1.5
BG60(Z); BK60(Z); BF60(Z);	3.31	3.19	4.69	6.10	M20x1.5
BG70(Z); BK70(Z); BF70(Z);BF80(Z)	3.78	3.74	3.78	7.60	M20x1.5
BG80(Z); BK80(Z); BF90(Z);BG100(Z)	4.65	4.65	4.33	9.65	M20x1.5
BG90(Z); BK90(Z);	5.71	5.71	4.57	11.57	M24x1.5
M = Plug according to DIN 908 Dimensions in millimetres (mm)					

Position of the drain plugs for BG, BK, BS and BF gear ranges and pre-stages.

