

Sure-Grip® Idler Bushing

Installation & Maintenance Manual

P-5071-TBW
Form 885D



The Sure-Grip tapered, QD-style interchangeable idler bushing offers flexible and easy installation while providing many hours of reliable service. To ensure that the bushing performs as specified it must be properly installed. Before beginning, make sure the correct size and quantity of parts are available for the installation.

WARNING:

Rotating equipment must be properly guarded.

It is the responsibility of the user to properly guard all rotating equipment to comply with OSHA or any applicable regulations. Failure to properly guard may contribute to severe injury should someone come in contact with the rotating parts or should the rotating part fail.

WARNING:

DO NOT use Wood’s products on any primary aircraft drive or any other drive which could endanger human life should a drive component fail.

WARNING:

It is essential that the idler assembly be installed as close to mounting structure as possible to minimize overhung loads.

Excessive loads may cause a premature failure of the stud and/or bearings of the idler bushing.

INSTALLATION

IMPORTANT – Do not use lubricants in this installation

1. Thoroughly inspect the bore of the mating hub and the tapered surface of the idler bushing. Any paint, dirt, grease, oil, etc. **MUST** be removed.
2. Place the idler bushing in the mating hub. Align the drilled holes in the mating hub with the threaded holes in the idler bushing flange. Insert the cap screws, with lock washers, through the drilled holes in the mating hub into the tapped holes in the idler bushing flange and finger-tighten, see Figure 1. Using a torque wrench, tighten all caps screws evenly and progressively in rotation to the torque value listed in Table 1.

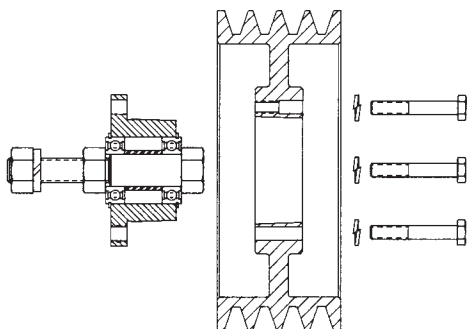


Figure 1

Table 1 – Cap Screw Tightening Torque


Idler	Cap Screw	Torque
SH-BB	1/4-20NC	5 ft. lb.
SD-BB	1/4-20NC	5 ft. lb.
SK-BB	5/16-18NC	8 ft. lb.
SF-BB	3/8-16NC	15 ft. lb.
E-BB	1/2-13NC	30 ft. lb.

WARNING:

The tightening force on the screws is multiplied many times by the wedging action of the bushing’s tapered surface. If extreme tightening force is applied, or if a lubricant is used, bursting pressures will be created in the hub of the mating part.

Do not attempt to over tighten cap screws to a point where the bushing flange touches the face of the mating part. These torque values must be adhered to or idler assembly will fail prematurely.

- Mount the assembly to the mounting structure. Place lockwasher and then outer nut on idler bushing stud, Figure 2. Using a torque wrench, tighten the outer nut to the value listed in Table 2.

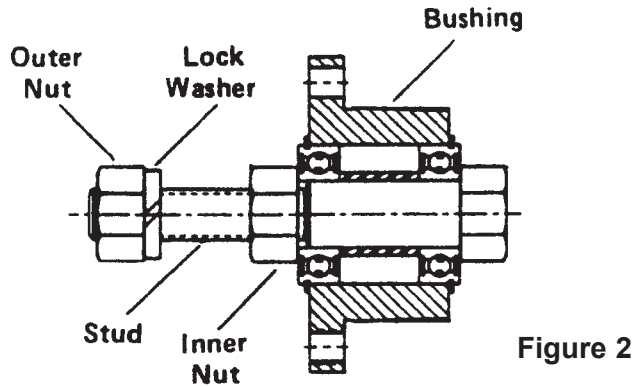


Idler	Cap Screw	Torque
SH-BB	1/2-13NC	60 ft. lb.
SD-BB	1/2-13NC	60 ft. lb.
SD-BB58	5/8-11NC	125 ft. lb.
SK-BB	3/4-10NC	225 ft. lb.
SF-BB	3/4-10NC	225 ft. lb.
SF-BB1	1-8NC	300 ft. lb.
E-BB	1 3/8-8NC	750 ft. lb.

Note: If the assembly will be threaded into a tapped hole in the mounting surface, extreme care should be used to prevent the inner nut from turning against the bearings. Additional tightening force on inner nut will cause bearings to fail prematurely.

WARNING

The inner nut has been tightened to 5 ft. lbs. DO NOT tamper with or retighten above this value or the bearings will fail prematurely.

- Make sure idler assembly is parallel with both the driveR and driveN shaft. Properly align the driveR, driveN, and idler assembly by the four-point method illustrated in Figure 3, below.

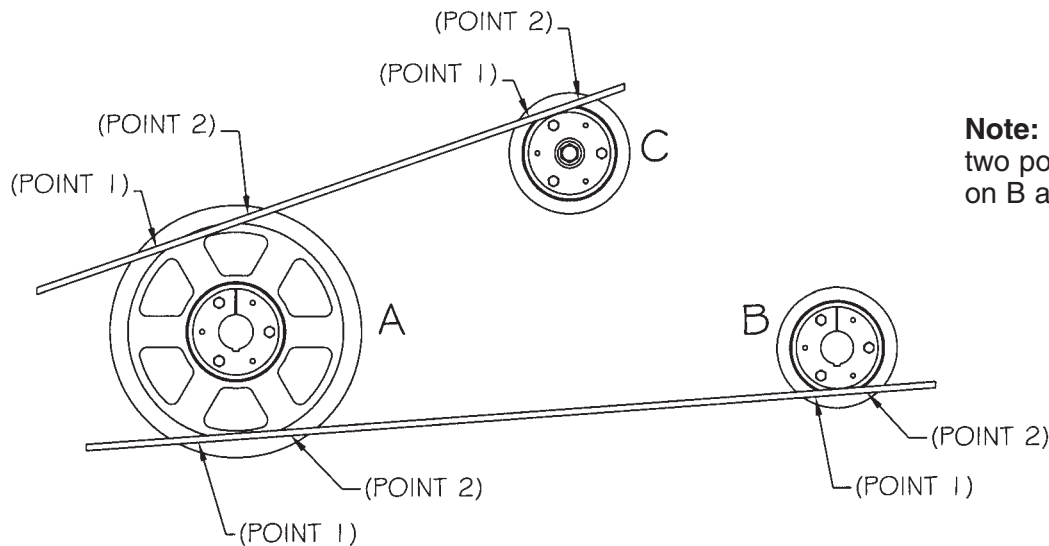

Note: Straight edge must touch two points on A and two points on B and C.

Figure 3

To Remove:

- Loosen and remove all of the cap screws from the idler assembly.
- Insert the cap screws into the tapped holes in the mating hub. Evenly and progressively tighten the cap screws until the idler bushing and mating hub separate.
- Remove idler assembly from the mounting structure.

Replacement Parts:

Following is a list of the replacement bearings.

Note: The inner nut torque should not exceed 5 ft. lbs. when reassembling.

Bushing Size	Replacement Bearings (2 per unit)
SH-BB	G275
SD-BB	G275
SK-BB	G276
SF-BB	G276
E-BB	G277

All Customer Service phone numbers shown in bold

Belted Drives and Sheaves

TB Wood's

Belted Drives
Chambersburg, PA - USA
1-888-829-6637 – Press #5
For application assistance:
1-888-829-6637 – Press #7

Couplings

Ameridrives

Mill Spindles, Ameriflex, Ameridisc
Erie, PA - USA
1-814-480-5000

Gear Couplings
San Marcos, TX - USA
1-800-458-0887

Universal Joints, Drive Shafts, Mill Gear Couplings

Erie, PA - USA
1-920-593-2444

Bibby Turboflex

Disc, Gear, Grid Couplings, Overload Clutches
Dewsbury, England
+44 (0) 1924 460801

Boksburg, South Africa
+27(0) 11 918 4270

Guardian Couplings

Engineered Flywheel Couplings, Engine Housings and Pump Mounts, Flexible Shaft Couplings
Michigan City, IN - USA
1-219-874-5248

Huco

Precision Couplings and Air Motors
Hertford, England
+44 (0) 1992 501900
Chambersburg, PA - USA
1-888-829-6637

Lamiflex Couplings

Flexible Couplings, Bearing Isolators, and Coupling Guards
Cotia, SP - Brasil
+55 (11) 4615-6300

Couplings Cont.

TB Wood's

Elastomeric Couplings
Chambersburg, PA - USA
1-888-829-6637 – Press #5
For application assistance:
1-888-829-6637 – Press #7

General Purpose Disc Couplings
San Marcos, TX - USA
1-888-449-9439

Electromagnetic Clutches and Brakes

Inertia Dynamics

Spring Set Brakes; Power On and Wrap Spring Clutch/Brakes
New Hartford, CT - USA
1-800-800-6445

Matrix

Electromagnetic Clutches and Brakes, Pressure Operated Clutches and Brakes

Brechin, Scotland
+44 (0) 1356 602000
New Hartford, CT - USA
1-800-825-6544

Warner Electric

Electromagnetic Clutches and Brakes
New Hartford, CT - USA
1-800-825-6544
For application assistance:
1-800-825-9050
Saint Barthélemy d'Anjou, France
+33 (0)2 41 21 24 24
Precision Electric Coils and Electromagnetic Clutches and Brakes
Columbia City, IN - USA
1-260-244-6183

Engineered Bearing Assemblies

Kilian

Engineered Bearing Assemblies
Syracuse, NY - USA
1-315-432-0700

Gearing

Bauer Gear Motor

Gear Motors
Esslingen, Germany
+49 (711) 3518-0
Middlesex, NJ - USA
1-732-469-8770

Boston Gear

Enclosed and Open Gearing, Electrical and Mechanical P.T. Components
Charlotte, NC - USA
1-800-825-6544
For application assistance:
1-800-816-5608

Nuttall Gear and Delroyd Worm Gear

Worm Gear and Helical Speed Reducers
Niagara Falls, NY - USA
1-716-298-4100

Heavy Duty Clutches and Brakes

Industrial Clutch

Pneumatic and Oil Immersed Clutches and Brakes
Waukesha, WI - USA
1-262-547-3357

Svendborg Brakes

Industrial Brakes and Brake Systems
Vejstrup, Denmark
+45 63 255 255

Twiflex

Caliper Brakes and Thrusters
Wichita Falls, TX - USA
1-844-723-3483
Twickenham, England
+44 (0) 20 8894 1161

Wichita Clutch

Pneumatic Clutches and Brakes
Wichita Falls, TX - USA
1-800-964-3262
Bedford, England
+44 (0) 1234 350311

Linear Products

Warner Linear

Linear Actuators
New Hartford, CT - USA
1-800-825-6544
For application assistance:
1-800-825-9050

Saint Barthélemy d'Anjou, France
+33 (0)2 41 21 24 24

Overrunning Clutches

Formsprag Clutch

Overrunning Clutches and Holdbacks
Warren, MI - USA
1-800-348-0881 – Press #1
For application assistance:
1-800-348-0881 – Press #2

Marland Clutch

Roller Ramp and Sprag Type Overrunning Clutches and Backstops
Warren, MI - USA
1-800-216-3515

Stieber Clutch

Overrunning Clutches and Holdbacks
Heidelberg, Germany
+49 (0) 6221-30470

For information concerning our sales offices in Asia Pacific check our website www.altramotion.com.cn



www.tbwoods.com

2000 Clovis Barker Road
San Marcos, TX 78666
512-353-4000