


Form-Flex® Coupling Type AR All Sizes and All Classes

Installation & Maintenance Instructions

P-5019-TBW
Form 1128A



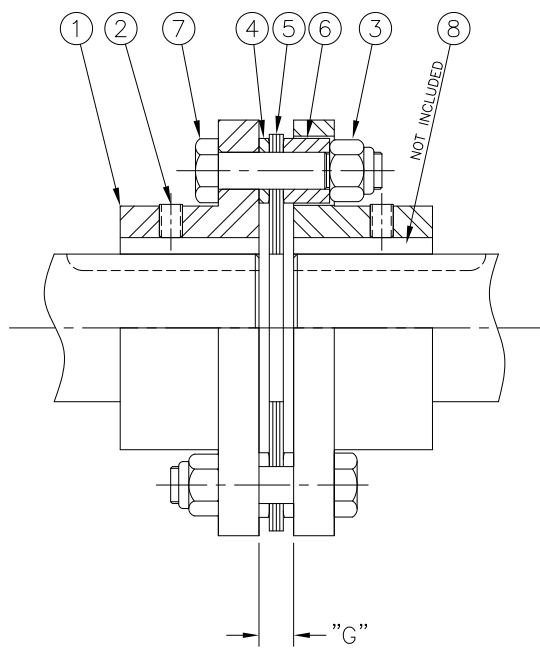

(Figure 1)

Parts List

- 1. Hub (2)
- 2. Set Screw (4)
- 3. Nut (4)
- 4. Thin Washer (4)
- 5. Flex Element (1)
- 6. Thick Washer (4)
- 7. Bolt (2)
- 8. Key (Not Included)



(Figure 2)

⚠ WARNING:
 ROTATING EQUIPMENT IS POTENTIALLY DANGEROUS AND MUST BE PROPERLY GUARDED. THE USER SHOULD COMPLY WITH APPLICABLE SAFETY CODES IN ACCORDANCE TO OSHA STANDARDS.

⚠ WARNING: Cancer and Reproductive Harm -
www.P65Warnings.ca.gov

Proper care in installing and aligning will permit couplings to operate to full capacity, compensate for angular misalignment, and provide very good service life.

Shafts may become misaligned as a result of many natural and unavoidable causes. Heat, vibration, bearing wear, settling of foundations, etc, all tend to alter initial alignment. To ensure longer life, re-check alignment after a short period of actual running.

In general, coupling life is increased when shafts are initially aligned carefully. If this is not done and a coupling is heavily stressed by torque or other forces, it will have little reserve left with which to accommodate misalignment stresses; and it might not provide the length of service intended. The closer the alignment T.I.R. is to zero, the better the service life of the coupling.

ASSEMBLY


1. Assemble the coupling using Figures 1 and 2 as a guide. Note: The curved faces on the washers must be placed adjacent to the flex element pack. See Figure 2.

THE THICK ELEMENT WASHERS NEST INTO THE LARGE CLEARANCE HOLES IN THE HUBS.

2. Torque tighten the locknuts to the values as shown in Table 2. After a short period of actual running, retorque all nuts to the proper value.

ALIGNMENT

1. After preliminary alignment and complete assembly, secure a dial indicator to one hub as shown in Figure 3 and indicate the face of the hub as shown. The method of mounting the indicator is optional
2. Rotate the coupling to find the minimum indicator reading. Set the indicator for zero reading.
3. Again rotate the coupling 360° to check the misalignment.
4. Adjust the connected equipment until the indicator reading is within the maximum T.I.R. shown in Table 3. Note: The closer to zero misalignment the better the service that can be expected.

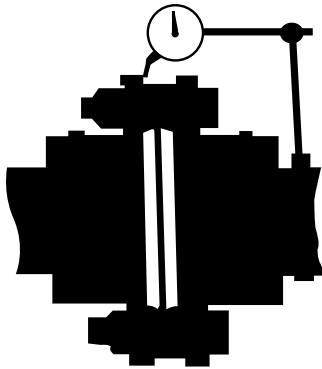

(Figure 3)

FLEX-PAC™ KITS

When required, flex packs can be replaced and kits are available. The kits consist of flex pack, washers, nuts and bolts. To order Flex-Pac Kits, it is necessary to furnish the model number of the Form-Flex coupling, which can be found on the face of the hub flange. Example: Please send one (1) Flex-Pac Kit for Type AJ25-0101 Form-Flex coupling. Orders must be placed with your local distributor or with the Original Equipment Manufacturer.

Rotating equipment is potentially dangerous and should be properly guarded. The user should check for all applicable safety codes in his area and provide a suitable guard.

Table 1 – Flange to Flange, Dimension “G” - Inches

Size	05	10	15	20	25	30	35	40	45	50	55
G	.24	.27	.32	.34	.45	.47	.55	.60	.85	.94	1.07
±	.010	.010	.010	.010	.015	.015	.015	.015	.020	.020	.020

Table 2 – Nut Tightening Torque (Lightly oiled threads on stainless fasteners)

Size	05	10	15	20	25	30	35	40	45	50	55
FT-LB	8	8	17	17	40	58	58	115	115	160	400

Table 3 – Total Indicator Reading, Maximum; Inches

Size	05	10	15	20	25	30	35	40	45	50	55
T.I.R.*	.020	.024	.028	.032	.038	.044	.052	.060	.066	.076	.086

* Equivalent to .50° per flex element. Lower T.I.R. readings will provide better alignment of shafts and longer service life.

Important: To ensure unlimited life, re-check alignment after a short period (one to two hours) of actual running. At this time, also re-torque bolts and nuts to values in Table 2.

TB Wood's Facilities

North America

USA

440 North Fifth Avenue
Chambersburg, PA 17201 - USA
888-829-6637 * 717-264-7161
Belted Drives and Elastomeric Couplings

Customer Service
1-888-829-6637 (Press #5)

For Application Support
1-888-829-6637 (Press #7)

2000 Clovis Barker Road
San Marcos, TX 78666 - USA
1-888-449-9439
General Purpose Disc Couplings

Customer Service
1-888-449-9439

4970 Joule St
Reno, NV 89502 - USA
775-857-1800

Canada

9779 45 Ave NW
Edmonton, AB T6E 5V8 - Canada
+1 780-439-7979

6305 Danville Road
Mississauga, ON L5T 2H7 - Canada
1-800-829-6631

1073 Rue Bégin
Saint-Laurent, QC H4R 1V8 - Canada
+1 514-332-4812

Mexico

Comisión Federal de Electricidad 850,
Industrial San Luis,
San Luis, S.L.P., 78395 - Mexico
+52 444 137 1500

Europe

Merchant Drive, Hertford
Hertfordshire SG13 7BL - England
+44(0)1992 501900
Elastomeric Couplings

The Brands of Altra Motion

Couplings

Ameridrives
www.ameridrives.com

Bibby Turboflex
www.bibbyturboflex.com

Guardian Couplings
www.guardiancouplings.com

Huco
www.huco.com

Lamiflex Couplings
www.lamiflexcouplings.com

Stromag
www.stromag.com

TB Wood's
www.tbwoods.com

Linear Systems

Thomson
www.thomsonlinear.com

Warner Linear
www.warnerlinear.com

Geared Cam Limit Switches

Stromag
www.stromag.com

Engineered Bearing Assemblies

Kilian
www.kilianbearings.com

Electric Clutches & Brakes

Matrix
www.matrix-international.com

Stromag
www.stromag.com

Warner Electric
www.warnerelectric.com

Deltran
www.thomsonlinear.com

Belted Drives

TB Wood's
www.tbwoods.com

Heavy Duty Clutches & Brakes

Twiflex
www.twiflex.com

Stromag
www.stromag.com

Svendborg Brakes
www.svendborg-brakes.com

Wichita Clutch
www.wichitaclutch.com

Gearing & Specialty Components

Bauer Gear Motor
www.bauergears.com

Boston Gear
www.bostongear.com

Delevan
www.delevan.com

Delroyd Worm Gear
www.delroyd.com

Nuttall Gear
www.nuttallgear.com

Engine Braking Systems

Jacobs Vehicle Systems
www.jacobsvehiclesystems.com

Precision Motors & Automation

Kollmorgen
www.kollmorgen.com

Miniature Motors

Portescap
www.portescap.com

Overrunning Clutches

Formsprag Clutch
www.formsprag.com

Marland Clutch
www.marland.com

Stieber
www.stieberclutch.com

Neither the accuracy nor completeness of the information contained in this publication is guaranteed by the company and may be subject to change in its sole discretion. The operating and performance characteristics of these products may vary depending on the application, installation, operating conditions and environmental factors. The company's terms and conditions of sale can be viewed at <http://www.altramotion.com/terms-and-conditions/sales-terms-and-conditions>. These terms and conditions apply to any person who may buy, acquire or use a product referred to herein, including any person who buys from a licensed distributor of these branded products.

©2019 by TB Wood's LLC. All rights reserved. All trademarks in this publication are the sole and exclusive property of TB Wood's LLC or one of its affiliated companies.



www.tbwoods.com

2000 Clovis Barker Road
San Marcos, TX 78666
512-353-4000